ST-JX301/JX401

SERVICE MANUAL

US Model
Canadian Model
E Model
ST-JX301

US Model
E Model
ST-JX401

- This model is almost the same as the model ST-JX295/JX390 previously produced. Therefore, see the ST-JX295/JX390 service manual for the information not contained in this service manual.
- ST-JX301 is the same ST-JX295.
- ST-JX401 is the same ST-JX390.

FM STEREO/FM-AM TUNER

SONY

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety check before releasing the set to the customer:
Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microampers). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

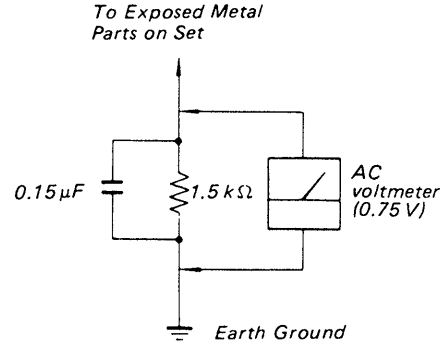

Fig. A. Using an AC voltmeter to check AC leakage.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ⚠ OR DOTTED LINE WITH MARK ⚠ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

TABLE OF CONTENTS

Section	Title	Page
	Safety Check-out	2
SECTION 1.	DIAGRAMS	
1-1.	Semiconductor Lead Layouts	4
1-2.	Printed Wiring Boards	5
1-3.	Schematic Diagram (Tuner Section)	9
1-4.	FE1 (Front End) Schematic Diagram	11
1-5.	Waveforms	11
1-6.	Schematic Diagram (Control and Power Section)	12
SECTION 2.	EXPLODED VIEW	15
SECTION 3.	ELECTRICAL PARTS LIST	16

To change the AM tuning interval

The AM tuning interval is preset at the factory to 10 kHz to match the frequency allocation system of your country. To change the interval to 9 kHz, proceed as follows.

1 Depress the POWER switch to turn on the unit.
2 Set the BAND FM/AM selector to AM.
3 Press the POWER switch to turn off the unit.
4 Hold the TUNING knob in the "+" position, and depress the POWER switch to turn on the unit. To reset the interval to 10 kHz, follow the same procedure.

Note

When the interval is changed, all preset stations which you have memorized using the numeric buttons will be erased from the memory. After changing the interval, be sure to preset the stations again.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE ⚠ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

SECTION 1
DIAGRAMS

2-1. SEMICONDUCTOR LEAD LAYOUTS

BA1L4M
2SC2785



EQA02-30B
US1060M
10E2N



LA5667



TMP47C670N-1282

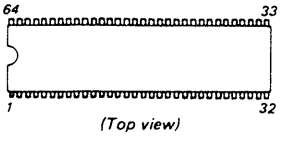

DTC114ES
2SA1348
2SC2669

LA1851N



LC7218



2SC3112

RD5.6ES-B2
UZL-6L2



2SK246GR3



Note :

- All capacitors are in μF unless otherwise noted.
  pF : μμF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and ¼ W or less unless otherwise specified.
- △ : internal component.
- : nonflammable resistor.
- : fusible resistor.

Note :	**Note :**
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- B+ : B+ Line.
- B− : B− Line.
- : adjustment for repair.

- Voltage and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- no mark : FM
- ( ) : AM
- Voltage are taken with a VOM (Input impedance 10 MΩ). Voltage variations may be noted due to normal production tolerances.
- Wavefroms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to wavefroms.
- Signal path.
  ⇨ : FM

[Service Note]

INDICATOR TUBE ALL LIGHT-UP MODE
When turning POWER switch on while pressing PRESET 1 and AUTO TUNING KEYS simultaneously, all the segments of FL701 will light.

2-2. PRINTED WIRING BOARDS

Note:
- ○— : parts extracted from the component side.
- [ ]— : indicates side identified with part number.
- ▨ : Pattern on the side which is seen.

[Note on Inserting the Cord to the Connector on Tuner Board]

- Insert the cord to the connector fitting Pin ① of the cord in accordance with the white mark on the board at the connector as shown in the figure.

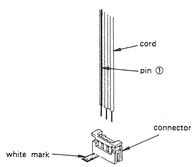

● Semiconductor Location

Ref. No.	Location	Ref. No.	Location
Q21	H-8	D714	B-5
Q22	H-8	D715	B-4
Q23	H-8	D716	B-4
Q24	H-8	D717	B-4
D501	F-15	D718	B-3
D502	F-15		
D503	G-15	IC21	H-6
D504	G-15	IC81	E-4
D505	G-14	IC501	E-15
D506	G-15	IC701	B-12
D507	E-12		
D601	H-10	Q1	G-4
D602	H-10	Q2	G-4
D603	G-12	Q21	F-7
D701	B-14	Q22	G-7
D702	B-10	Q26	I-7
D703	B-8	Q27	G-8
D707	B-3	Q28	H-8
D708	B-3	Q81	F-5
D709	B-3	Q82	F-5
D710	B-9	Q83	E-3
D711	B-8	Q84	E-2
D712	B-7	Q601	G-10
D713	B-6	Q602	G-10

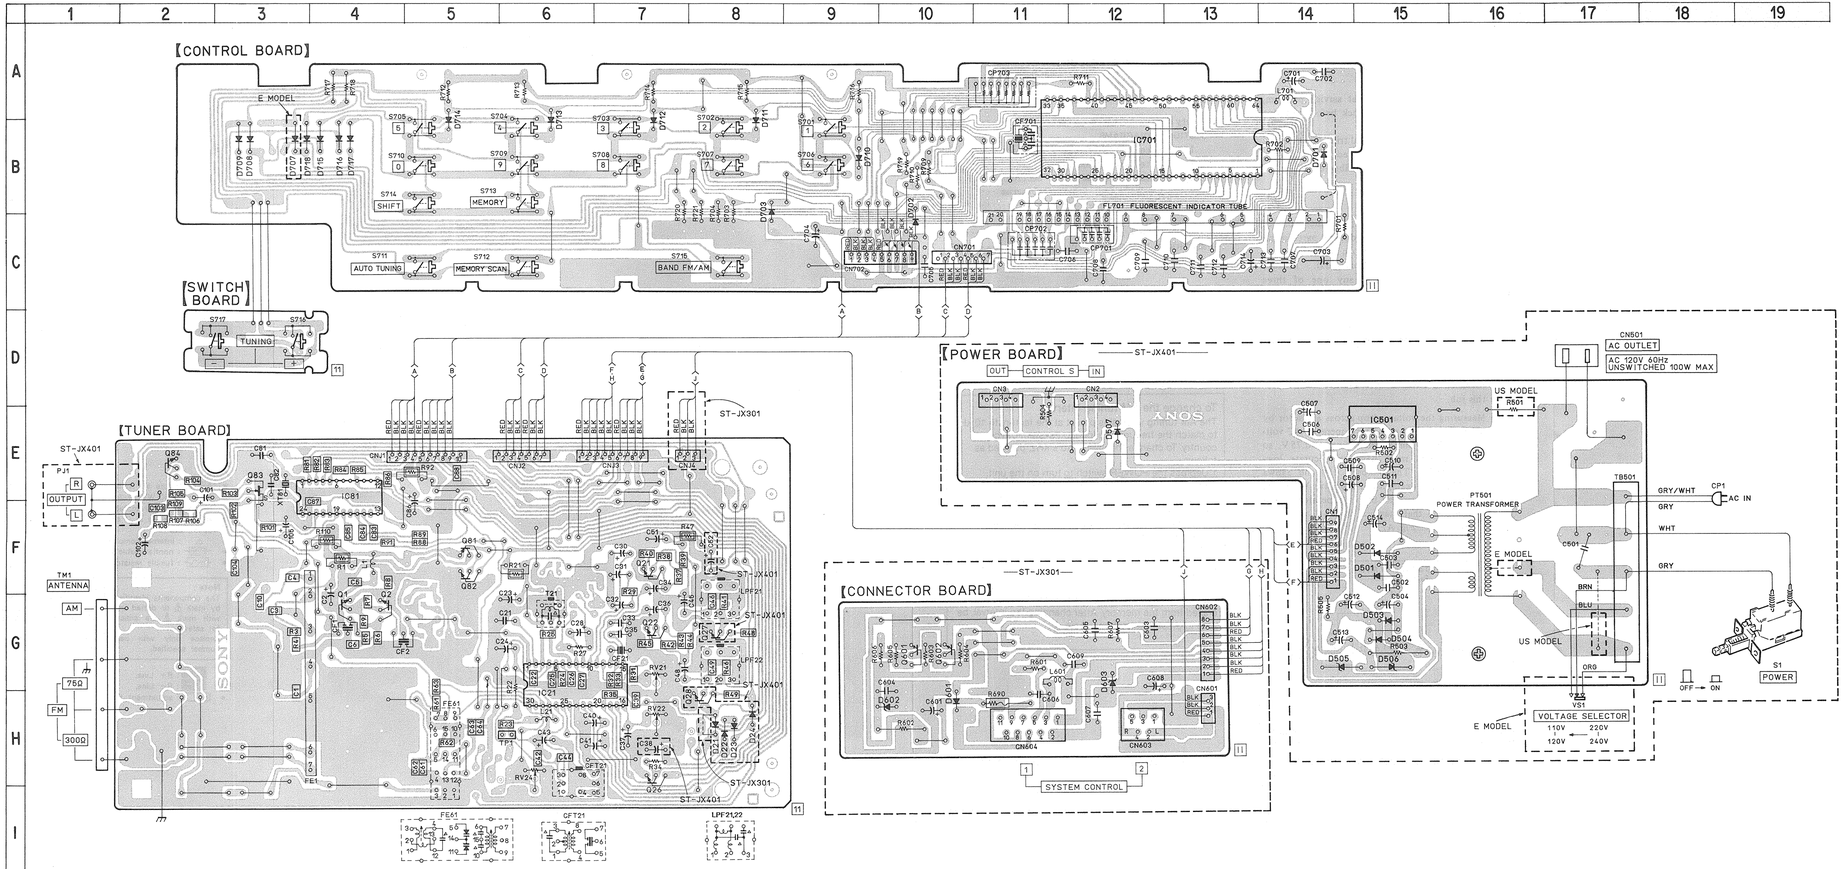

2-3. SCHEMATIC DIAGRAM — Tuner Section —

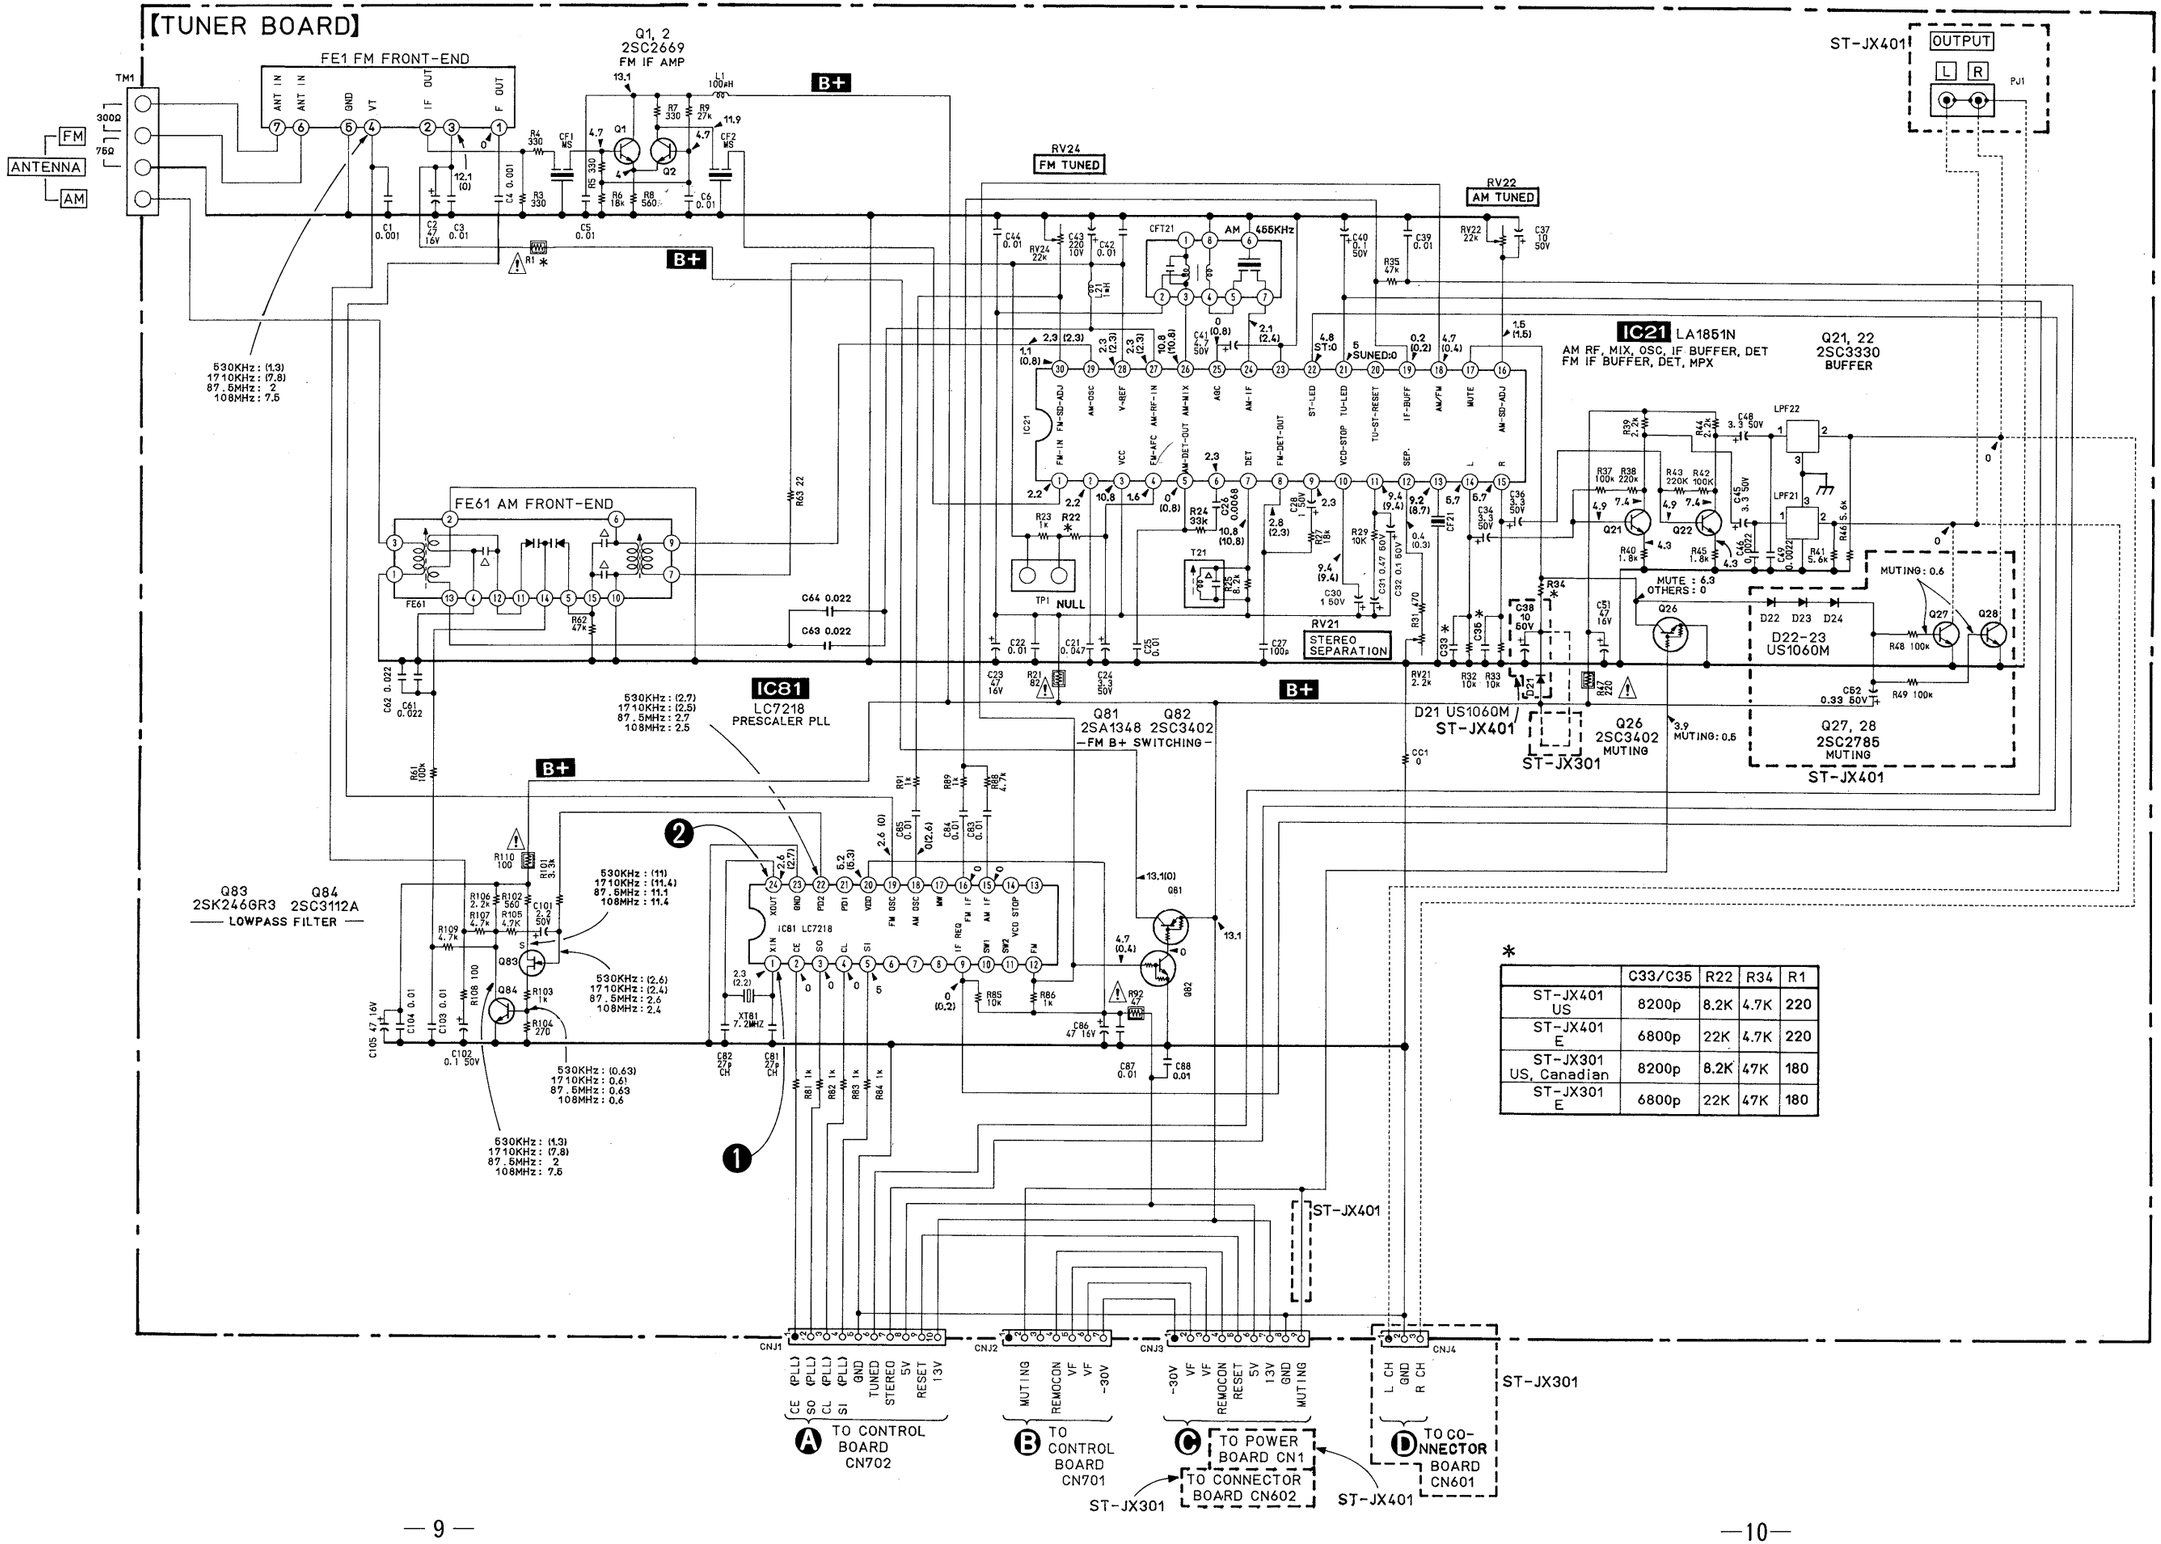

*

	C33/C35	R22	R34	R1
ST-JX401 US	8200p	8.2K	4.7K	220
ST-JX401 E	6800p	22K	4.7K	220
ST-JX301 US, Canadian	8200p	8.2K	47K	180
ST-JX301 E	6800p	22K	47K	180

2-4. FE1 (Front End) Schematic Diagram

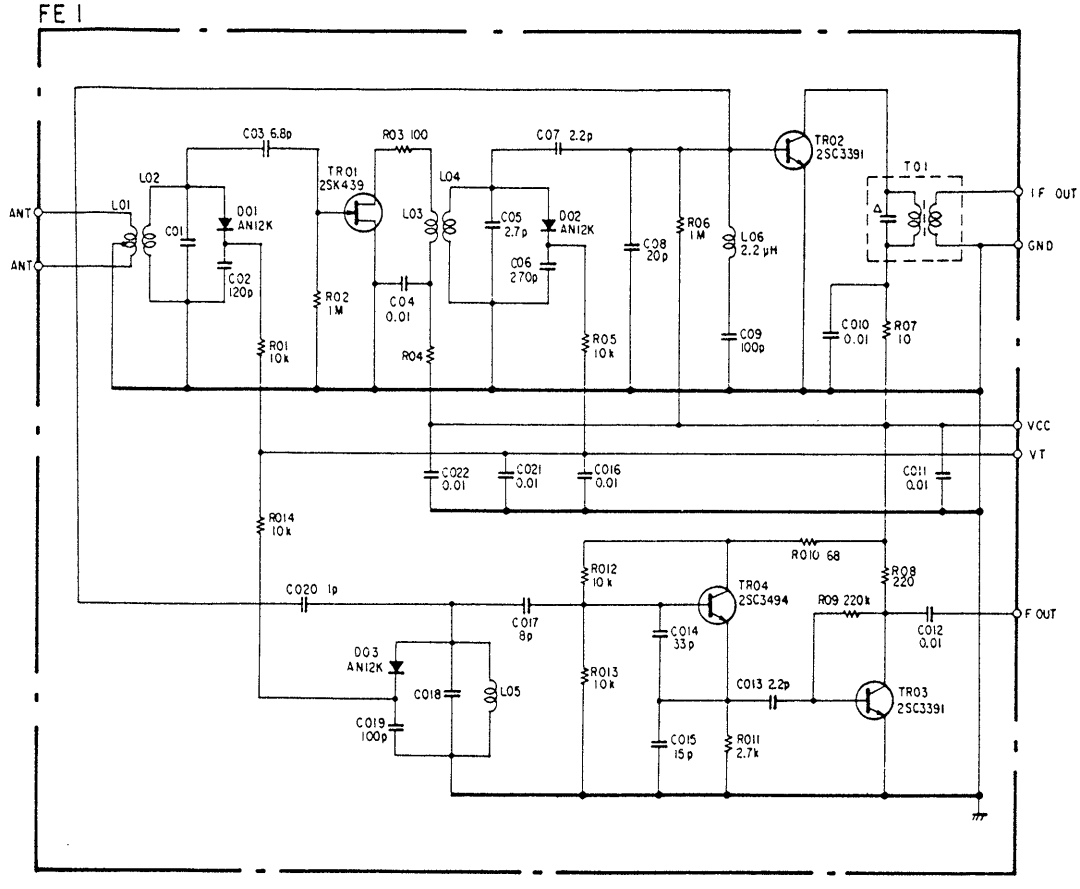

2-5. WAVEFORMS

No.	Wave Forms	No.	Wave Forms
①	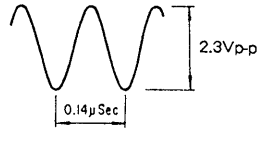	③	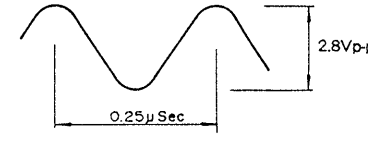
②	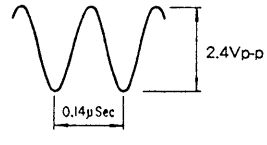	④	
		⑤	

2-6. SCHEMATIC DIAGRAM —Control and Power Section— • Refer to page 4 for note.

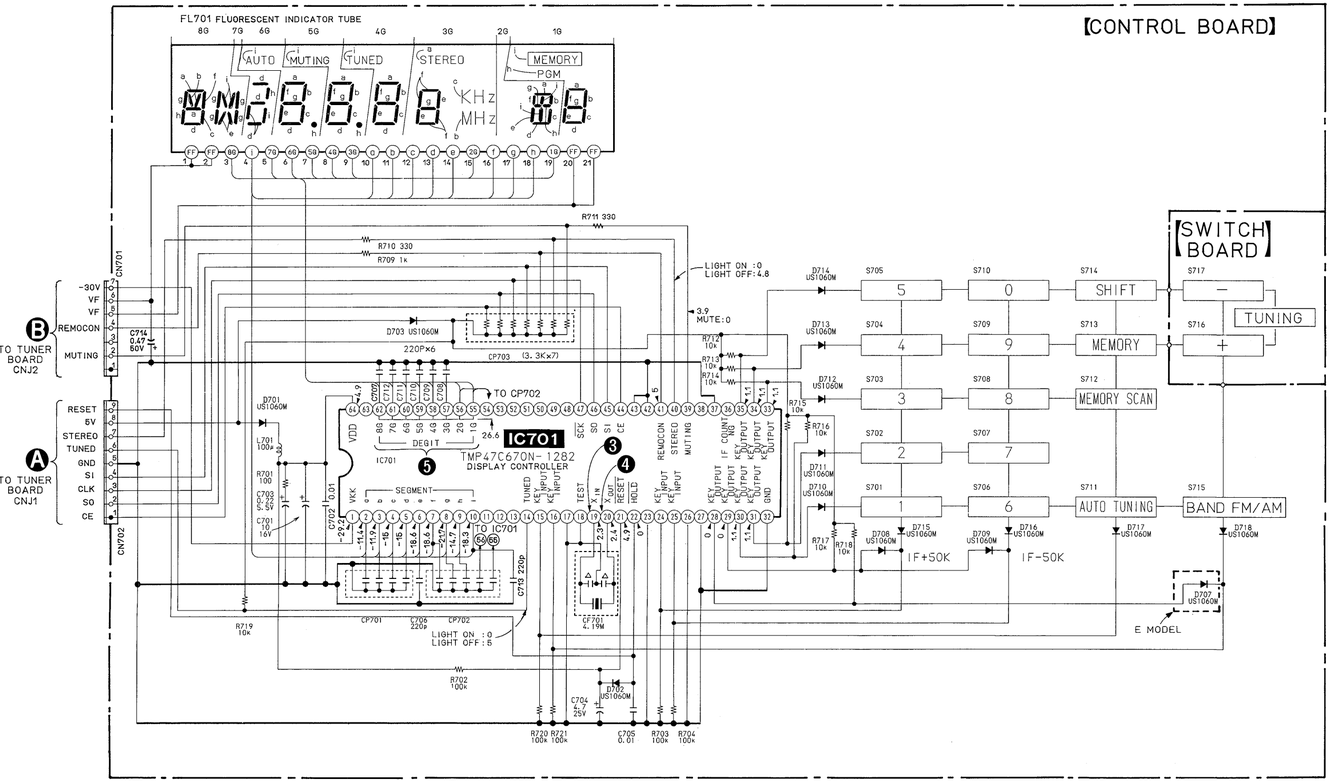

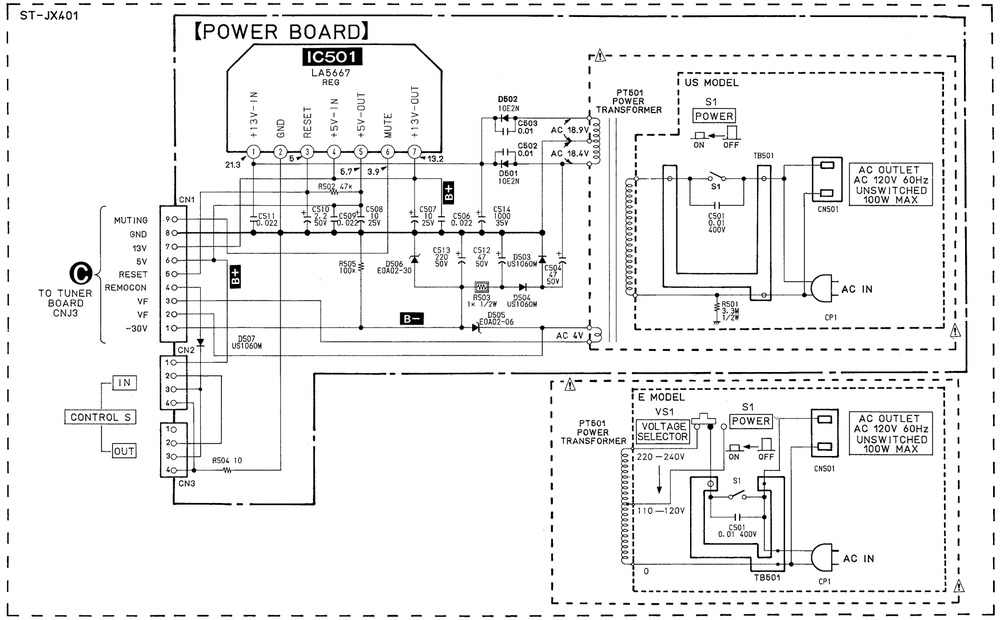

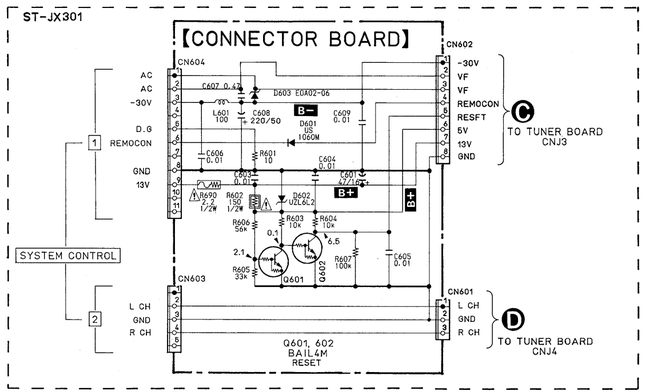

SECTION 2
EXPLODED VIEW

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part number suffix -XX and -X may be different from the parts specified in the components used on the set.
- Color Indication of Appearance Parts Example:
  (RED) . . . KNOB, BALANCE (WHITE)
  ↑ Cabinet's Color ↑ Parts' Color

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifé.

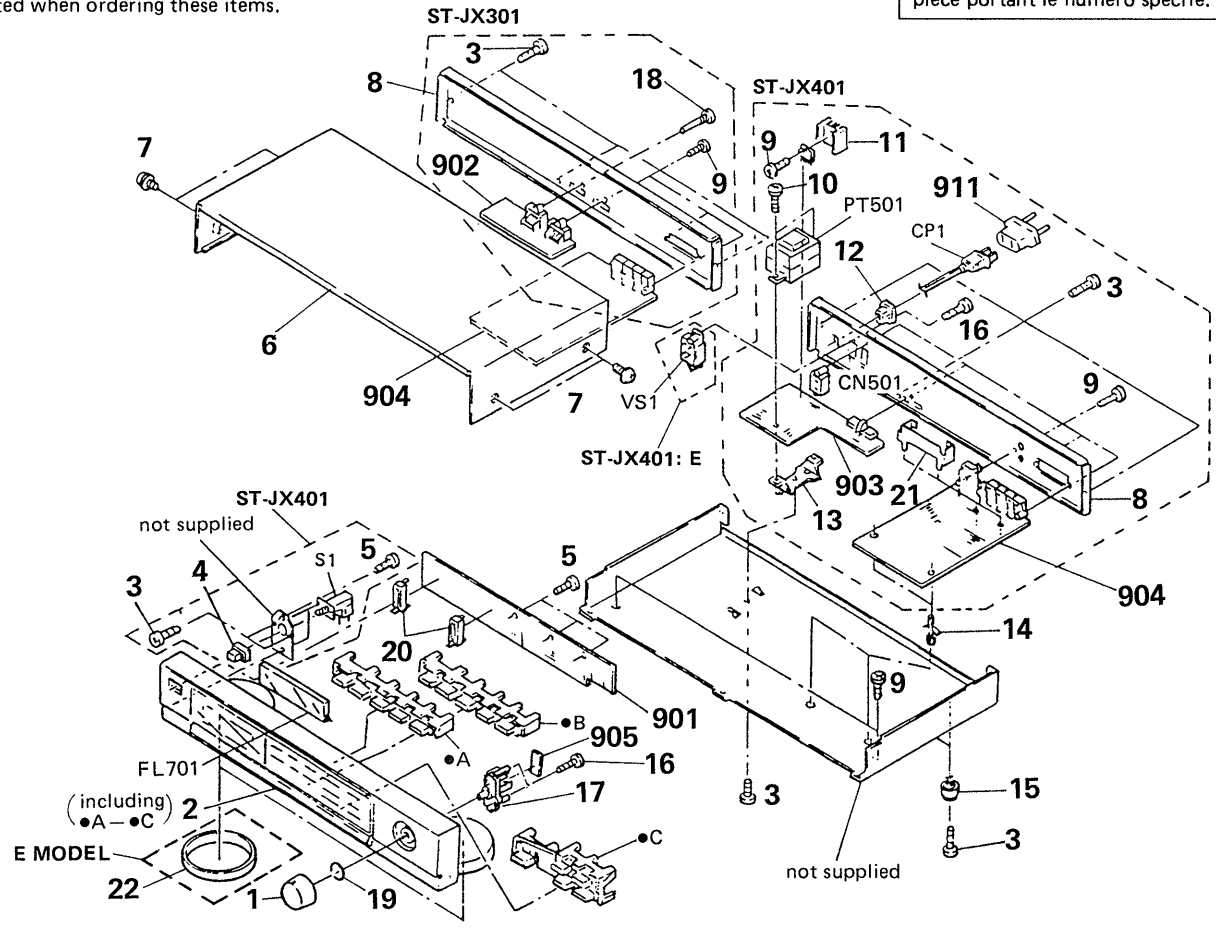

No.	Part No.	Description	Remarks
1	4-922-790-11	KNOB (TUNING)	
2	X-4905-267-1	(JX401:US)...PANEL ASSY, FRONT	
	X-4905-268-1	(JX301:US,Canadian)...PANEL ASSY, FRONT	
	X-4905-270-1	(JX301:E)....PANEL ASSY, FRONT	
	X-4905-271-1	(JX401:E)....PANEL ASSY, FRONT	
3	7-682-548-09	SCREW +BVTT 3X8 (S)	
4	3-354-912-01	(JX401)...KNOB, POWER	
5	4-928-635-01	SCREW, +BV (2.6X8) TAPPING	
6	4-917-050-51	CASE	
7	3-704-366-01	SCREW (CASE) (M3X8)	
8	*4-917-071-01	(JX301).....PANEL, BACK	
	*4-917-072-01	(JX401:US)...PANEL, BACK	
	*4-917-072-11	(JX401:E)....PANEL, BACK	
9	7-685-646-79	SCREW +BTP 3X8 TYPE2 N-S	
10	7-682-550-04	SCREW +BVTT 3X12 (S)	
11	*4-363-146-31	(JX401)...HEAT SINK, V.OUT	
12	*3-703-571-11	(JX401)...BUSHING (S) (4516), CORD	
13	*4-917-044-01	(JX401)...BRACKET (PT)	
14	*3-346-265-11	HOLDER, PC BOARD	
15	4-927-849-01	FOOT	
16	7-685-534-19	SCREW +BTP 2.6X8 TYPE2 N-S	
17	X-4905-269-1	SHAFT ASSY, TUNING	
18	3-704-242-01	(JX301)...SCREW, TERMINAL, +BVTP CLAW	
19	3-350-426-01	SPRING	
20	*4-924-989-11	HOLDER (FL TUBE)	
21	*4-924-988-11	PLATE (ST), GROUND	
22	*4-929-030-11	(E)...RING, ORNAMENTAL	

No.	Part No.	Description	Remarks
901	*A-4334-193-A	(JX301:US,Canadian) ...MOUNTED PCB, CONTROL	
	*A-4334-194-A	(JX301:E)....MOUNTED PCB, CONTROL	
	*A-4334-198-A	(JX401:E)....MOUNTED PCB, CONTROL	
	*A-4334-200-A	(JX401:US)...MOUNTED PCB, CONTROL	
902	*1-634-534-11	(JX301)...PC BOARD, CONNECTOR	
903	*1-634-531-11	(JX401)...PC BOARD, POWER	
904	*A-4303-241-A	(JX301:E).....MOUNTED PCB, TUNER	
	*A-4303-242-A	(JX301:US,Canadian)...MOUNTED PCB, TUNER	
	*A-4303-243-A	(JX401:E).....MOUNTED PCB, TUNER	
	*A-4303-244-A	(JX401:US).....MOUNTED PCB, TUNER	
905	*1-634-532-11	(JX401)...PC BOARD, SWITCH	
	*1-634-535-11	(JX301)...PC BOARD, SWITCH	
911	1-526-565-00	(JX401:E)...AC PLUG, ADAPTOR	
CN501	⚠1-540-038-11	(JX401:E)....OUTLET, AC (NONPOLAR)	
CN501	⚠1-540-057-11	(JX401:US)...OUTLET, AC (POLAR)	
CP1	1-558-945-11	(JX401:US)...CORD, POWER (POLAR.SPT-1)	
CP1	1-551-188-XX	(JX401:E)....CORD, POWER	
FL701	1-519-512-11	INDICATOR TUBE, FLUORESCENT	
PT501	⚠1-450-008-11	(JX401:E)....TRANSFORMER, POWER	
PT501	⚠1-450-010-11	(JX401:US)...TRANSFORMER, POWER	
S1	⚠1-554-920-11	(JX401)...SWITCH, PUSH (AC POWER)(1 KEY)	
VS1	⚠1-570-046-21	(JX401:E)...SWITCH, VOLTAGE CHANGE	

SECTION 3
ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:
MF: μF, PF: μμF.

RESISTORS
- All resistors are in ohms.
- F: nonflammable

COILS
- MMH: mH, UH: μH

SEMICONDUCTORS
In each case, U: μ, for example:
UA...: μA..., UPA...: μPA...,
UPC...: μPC, UPD...: μPD...

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No.	Part No.	Description
901	*A-4334-193-A	(JX301:US,Canadian) ...MOUNTED PCB, CONTROL
	*A-4334-194-A	(JX301:E)....MOUNTED PCB, CONTROL
	*A-4334-198-A	(JX401:E)....MOUNTED PCB, CONTROL
	*A-4334-200-A	(JX401:US)...MOUNTED PCB, CONTROL
902	*1-634-534-11	(JX301)...PC BOARD, CONNECTOR
903	*1-634-531-11	(JX401)...PC BOARD, POWER
904	*A-4303-241-A	(JX301:E).....MOUNTED PCB, TUNER
	*A-4303-242-A	(JX301:US,Canadian) ...MOUNTED PCB, TUNER
	*A-4303-243-A	(JX401:E).....MOUNTED PCB, TUNER
	*A-4303-244-A	(JX401:US).....MOUNTED PCB, TUNER
905	*1-634-532-11	(JX401)...PC BOARD, SWITCH
	*1-634-535-11	(JX301)...PC BOARD, SWITCH
911	1-526-565-00	(JX401:E)...AC PLUG, ADAPTOR
C1	1-162-294-31	CERAMIC CHIP 0.001MF 20% 25V
C2	1-126-022-11	CAP, ELECT 47MF 20% 16V
C3	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C4	1-162-294-31	CERAMIC CHIP 0.001MF 20% 25V
C5	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C6	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C21	1-161-021-11	CAP, CERAMIC 0.047MF 10% 25V
C22	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C23	1-126-022-11	CAP, ELECT 47MF 20% 25V
C24	1-126-162-11	CAP, ELECT 3.3MF 20% 50V
C25	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C26	1-163-019-00	CERAMIC MELF 0.0068MF 20% 12V
C27	1-162-516-11	CERAMIC CHIP 100PF 10% 50V
C28	1-126-301-11	CAP, ELECT 1.0MF 20% 50V
C30	1-126-301-11	CAP, ELECT 1.0MF 20% 50V
C31	1-126-300-11	CAP, ELECT 0.47MF 20% 50V
C32	1-124-463-00	CAP, ELECT 0.1MF 20% 50V
C33	1-130-481-00	(JX401/JX301:E)...CAP,PE TEREPHTHALATE 00068MF 5% 50V
C33	1-130-482-00	(JX401:US/JX301:US,Canadian)... CAP, PE TEREPHTHALATE 0.0082MF 5% 50V
C34	1-126-162-11	CAP, ELECT 3.3MF 20% 50V
C35	1-130-481-00	(JX401/JX301:E)...CAP,PE TEREPHTHALATE 00068MF 5% 50V
C35	1-130-482-00	(JX401:US/JX301:US,Canadian)... CAP, PE TEREPHTHALATE 0.0082MF 5% 50V
C36	1-126-162-11	CAP, ELECT 3.3MF 20% 50V
C37	1-126-059-11	CAP, ELECT 10MF 20% 50V
C38	1-123-875-11	(JX401)...CAP,ELECT 10MF 20% 50V
C39	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C40	1-124-463-00	CAP, ELECT 0.1MF 20% 50V
C41	1-124-045-00	CAP, ELECT 4.7MF 20% 50V
C42	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C43	1-126-101-11	CAP, ELECT 220MF 20% 10V
C44	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C45	1-126-162-11	CAP, ELECT 3.3MF 20% 50V
C46	1-161-375-00	CERAMIC MELF 0.0022MF 20% 25V
C48	1-126-162-11	CAP, ELECT 3.3MF 20% 50V
C49	1-161-375-00	CERAMIC MELF 0.0022MF 20% 25V
C51	1-126-022-11	CAP, ELECT 47MF 20% 25V
C52	1-124-252-00	(JX401)...CAP,ELECT 0.33MF 20% 50V
C61	1-163-063-00	CERAMIC MELF 0.022MF 25V
C62	1-163-063-00	CERAMIC MELF 0.022MF 25V
C63	1-163-063-00	CERAMIC MELF 0.022MF 25V
C64	1-163-063-00	CERAMIC MELF 0.022MF 25V
C81	1-102-961-00	CAP, CERAMIC 27PF 5% 50V
C82	1-102-961-00	CAP, CERAMIC 27PF 5% 50V
C83	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C84	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C85	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C86	1-126-022-11	CAP, ELECT 47MF 20% 25V
C87	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C88	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C101	1-126-161-11	CAP, ELECT 2.2MF 20% 50V
C102	1-124-463-00	CAP, ELECT 0.1MF 20% 50V
C103	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C104	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C105	1-126-022-11	CAP, ELECT 47MF 20% 25V
C501 ⚠	1-161-744-00	(JX401)...CERAMIC 0.01MF 400V
C502	1-101-004-00	(JX401)...CERAMIC 0.01MF 50V
C503	1-101-004-00	(JX401)...CERAMIC 0.01MF 50V
C504	1-124-910-11	(JX401)...ELECT 47MF 20% 50V
C506	1-101-005-00	(JX401)...CERAMIC 0.022MF 50V
C507	1-126-059-11	(JX401)...ELECT 10MF 20% 50V
C508	1-126-059-11	(JX401)...ELECT 10MF 20% 50V
C509	1-101-005-00	(JX401)...CERAMIC 0.022MF 50V
C510	1-126-161-11	(JX401)...ELECT 2.2MF 20% 50V
C511	1-101-005-00	(JX401)...CERAMIC 0.022MF 50V
C512	1-124-910-11	(JX401)...ELECT 47MF 20% 50V
C513	1-124-911-11	(JX401)...ELECT 220MF 20% 50V
C514	1-126-105-11	(JX401)...ELECT 1000MF 20% 35V
C601	1-126-022-11	(JX301)...ELECT 47MF 20% 25V
C603	1-101-004-00	(JX301)...CERAMIC 0.01MF 20% 50V
C604	1-101-004-00	(JX301)...CERAMIC 0.01MF 20% 50V
C605	1-101-004-00	(JX301)...CERAMIC 0.01MF 20% 50V

Ref.No.	Part No.	Description
C606	1-101-004-00	(JX301)...CERAMIC 0.01MF 20% 50V
C607	1-136-745-11	(JX301)...FILM 0.47MF 5% 50V
C608	1-124-911-11	(JX301)...ELECT 220MF 20% 50V
C609	1-101-004-00	(JX301)...CERAMIC 0.01MF 20% 50V
C701	1-126-157-11	ELECT 10MF 20% 16V
C702	1-161-379-00	CERAMIC 0.01MF 30% 16V
C703	1-125-486-11	CAP,DOUBLELAYEKS 0.22F 5.5V
C704	1-126-094-11	ELECT 4.7MF 20% 25V
C705	1-161-379-00	CERAMIC 0.01MF 30% 16V
C706	1-162-286-31	CERAMIC 220PF 10% 50V
C707	1-162-286-31	CERAMIC 220PF 10% 50V
C708	1-162-286-31	CERAMIC 220PF 10% 50V
C709	1-162-286-31	CERAMIC 220PF 10% 50V
C710	1-162-286-31	CERAMIC 220PF 10% 50V
C711	1-162-286-31	CERAMIC 220PF 10% 50V
C712	1-162-286-31	CERAMIC 220PF 10% 50V
C713	1-162-286-31	CERAMIC 220PF 10% 50V
C714	1-124-465-00	CAP,ELECT 0.47MF 20% 50V
CF1	1-567-389-11	FILTER, CERAMIC
CF2	1-567-389-11	FILTER, CERAMIC
CF21	1-577-075-11	OSCILLATOR, CERAMIC
CF701	1-577-101-11	VIBRATOR, CERAMIC
CFT21	1-404-853-11	TRANSFORMER,IF (CERAMIC FILTER)
CN1	*1-568-284-11	(JX401)...SOCKET, CONNECTOR 9P
CN2	1-564-980-11	(JX401)...PIN, CONNECTOR 4P
CN3	1-564-980-11	(JX401)...PIN, CONNECTOR 4P
CN501⚠	1-540-038-11	(JX401:E)....OUTLET, AC (NONPOLAR)
CN501⚠	1-540-057-11	(JX401:US)...OUTLET, AC (POLAR)
CN601	1-568-278-11	(JX301)...SOCKET, CONNECTOR 3P
CN602	1-568-283-11	(JX301)...SOCKET, CONNECTOR 8P
CN603	1-566-856-11	(JX301)...SOCKET, CONNECTOR 5P
CN604	1-566-858-11	(JX301)...SOCKET, CONNECTOR 11P
CN701	1-568-282-11	SOCKET, CONNECTOR 7P
CN702	*1-568-284-11	SOCKET, CONNECTOR 9P
CNJ1	*1-568-276-11	SOCKET, CONNECTOR 10P
CNJ2	*1-568-311-21	SOCKET, CONNECTOR 7P
CNJ3	*1-568-313-11	SOCKET, CONNECTOR 9P
CNJ4	1-568-269-11	(JX301)...SOCKET, CONNECTOR 3P
CP1	⚠.1-551-188-XX	(JX401:E)...CORD, POWER
CP1	⚠.1-558-945-11	(JX401:US)..CORD, POWER
CP701	1-233-148-11	COMPOSITION CIRCUIT BLOCK
D21	8-719-912-20	(JX401)...DIODE 1SS120
D22	8-719-912-20	(JX401)...DIODE 1SS120
D23	8-719-912-20	(JX401)...DIODE 1SS120
D24	8-719-912-20	(JX401)...DIODE 1SS120
D501	8-719-200-77	(JX401)...DIODE 10E2N
D502	8-719-200-77	(JX401)...DIODE 10E2N
D503	8-719-912-20	(JX401)...DIODE 1SS120
D504	8-719-912-20	(JX401)...DIODE 1SS120
D505	8-719-912-81	(JX401)...DIODE EQA02-06C
D506	8-719-904-93	(JX401)...DIODE EQA02-30B
D507	8-719-912-20	(JX401)...DIODE 1SS120
D601	8-719-912-20	(JX301)...DIODE 1SS120
D602	8-719-933-35	(JX301)...DIODE HZS6A3L
D603	8-719-912-81	(JX301)....DIODE EQA02-06C
D701	8-719-912-20	DIODE 1SS120
D702	8-719-912-20	DIODE 1SS120
D703	8-719-912-20	DIODE 1SS120

Ref.No.	Part No.	Description
D707	8-719-912-20	(JX401/JX301:E)...DIODE 1SS120
D708	8-719-912-20	DIODE 1SS120
D709	8-719-912-20	DIODE 1SS120
D710	8-719-912-20	DIODE 1SS120
D711	8-719-912-20	DIODE 1SS120
D712	8-719-912-20	DIODE 1SS120
D713	8-719-912-20	DIODE 1SS120
D714	8-719-912-20	DIODE 1SS120
D715	8-719-912-20	DIODE 1SS120
D716	8-719-912-20	DIODE 1SS120
D717	8-719-912-20	DIODE 1SS120
D718	8-719-912-20	DIODE 1SS120
FE1	1-463-962-11	FRONT END, FM
FE61	1-236-461-11	ENCAPSULATED COMPONENT
FL701	1-519-512-11	INDICATOR TUBE, FLUORESCENT
IC21	8-759-821-45	IC LA1851N
IC81	8-759-820-91	IC LC7218
IC501	8-759-820-09	(JX401)...IC LA5667
IC701	8-759-234-35	IC TMP47C670N-1283
L1	1-408-421-00	MICRO INDUCTOR (100UH)
L21	1-410-494-11	MICRO INDUCTOR (1MMH)
L601	1-408-421-00	(JX301)...INDUCTOR 100UH
L701	1-410-521-11	INDUCTOR 100UH
LPF21	1-235-164-00	FILTER, LOW PASS
LPF22	1-235-164-00	FILTER, LOW PASS
PJ1	1-565-352-21	(JX401)...JACK, PIN 2P
PT501⚠	1-450-008-11	(JX401:E)....TRANSFORMER, POWER
PT501⚠	1-450-010-11	(JX401:US)...TRANSFORMER, POWER
Q1	8-729-230-XX	TRANSISTOR 2SC2669
Q2	8-729-230-XX	TRANSISTOR 2SC2669
Q21	8-729-119-78	TRANSISTOR 2SC2785-HFE
Q22	8-729-119-78	TRANSISTOR 2SC2785-HFE
Q26	8-729-900-80	TRANSISTOR DTC114ES
Q27	8-729-620-05	(JX401)...TRANSISTOR 2SC2603-EF
Q28	8-729-620-05	(JX401)...TRANSISTOR 2SC2603-EF
Q81	8-729-900-61	TRANSISTOR DTA114ES
Q82	8-729-900-80	TRANSISTOR DTC114ES
Q83	8-729-202-67	TRANSISTOR 2SK246GR3
Q84	8-729-230-93	TRANSISTOR 2SC3113-AB
Q601	8-729-900-89	(JX301)...TRANSISTOR DTC144ES
Q602	8-729-900-89	(JX301)...TRANSISTOR DTC144ES
R1	⚠.1-249-408-11	(JX301)...RES, CARBON (SMALL) 180 5% 1/4W F
R1	⚠.1-249-409-11	(JX401)...RES, CARBON (SMALL) 220 5% 1/4W F
R3	1-249-329-11	CARBON MELF 330 5% 1/8W
R4	1-249-329-11	CARBON MELF 330 5% 1/8W
R5	1-249-329-11	CARBON MELF 330 5% 1/8W
R6	1-249-350-11	CARBON MELF 18K 5% 1/8W
R7	1-249-329-11	CARBON MELF 330 5% 1/8W
R8	1-249-332-11	CARBON MELF 560 5% 1/8W
R9	1-249-352-11	CARBON MELF 27K 5% 1/8W
R21	⚠.1-249-404-00	RES, CARBON (SMALL) 82 5% 1/4W F
R22	1-249-428-11	(JX401:US/JX301:US,Canadian) ...RES, CARBON (SMALL) 8.2K 5% 1/4W
R22	1-249-433-11	(JX401/JX301:E) ...RES, CARBON (SMALL) 22K 5% 1/4W

Note:
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Note:
Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No.	Part No.	Description
R23	1-249-335-11	CARBON MELF 1K 5% 1/8W
R24	1-249-353-11	CARBON MELF 33K 5% 1/8W
R25	1-249-346-11	CARBON MELF 8.2K 5% 1/8W
R27	1-249-432-11	RES, CARBON (SMALL) 18K 5% 1/4W
R29	1-249-347-11	CARBON MELF 10K 5% 1/8W
R31	1-249-331-11	CARBON MELF 470 5% 1/8W
R32	1-249-347-11	CARBON MELF 10K 5% 1/8W
R33	1-249-347-11	CARBON MELF 10K 5% 1/8W
R34	1-249-425-11	(JX401)..RES,CARBON(SMALL) 4.7K
R34	1-249-437-11	(JX301)..RES,CARBON(SMALL) 47K 5% 1/4W
R35	1-249-355-11	CARBON MELF 47K 5% 1/8W
R37	1-249-359-11	CARBON MELF 100K 5% 1/8W
R38	1-249-363-11	CARBON MELF 220K 5% 1/8W
R39	1-249-339-11	CARBON MELF 2.2K 5% 1/8W
R40	1-249-338-11	CARBON MELF 1.8K 5% 1/8W
R41	1-249-344-11	CARBON MELF 5.6K 5% 1/8W
R42	1-249-359-11	CARBON MELF 100K 5% 1/8W
R43	1-249-363-11	CARBON MELF 220K 5% 1/8W
R44	1-249-339-11	CARBON MELF 2.2K 5% 1/8W
R45	1-249-338-11	CARBON MELF 1.8K 5% 1/8W
R46	1-249-344-11	CARBON MELF 5.6K 5% 1/8W
R47	⚠1-249-409-11	RES, CARBON (SMALL) 220 5% 1/4W F
R48	1-249-359-11	(JX401)...CARBON MELF 100K 5% 1/8W
R49	1-249-359-11	(JX301)...CARBON MELF 100K 5% 1/8W
R61	1-249-359-11	CARBON MELF 100K 5% 1/8W
R62	1-249-355-11	CARBON MELF 47K 5% 1/8W
R63	1-249-315-11	CARBON MELF 22 5% 1/8W
R81	1-249-335-11	CARBON MELF 1K 5% 1/8W
R82	1-249-335-11	CARBON MELF 1K 5% 1/8W
R83	1-249-335-11	CARBON MELF 1K 5% 1/8W
R84	1-249-335-11	CARBON MELF 1K 5% 1/8W
R85	1-249-347-11	CARBON MELF 10K 5% 1/8W
R86	1-249-335-11	CARBON MELF 1K 5% 1/8W
R88	1-249-343-11	CARBON MELF 4.7K 5% 1/8W
R89	1-249-335-11	CARBON MELF 1K 5% 1/8W
R91	1-249-335-11	CARBON MELF 1K 5% 1/8W
R92	⚠1-249-401-11	RES, CARBON (SMALL) 47 5% 1/4W F
R101	1-249-341-11	CARBON MELF 3.3K 5% 1/8W
R102	1-249-332-11	CARBON MELF 560 5% 1/8W
R103	1-249-335-11	CARBON MELF 1K 5% 1/8W
R104	1-249-328-11	CARBON MELF 270 5% 1/8W
R105	1-249-343-11	CARBON MELF 4.7K 5% 1/8W
R106	1-249-339-11	CARBON MELF 2.2K 5% 1/8W
R107	1-249-343-11	CARBON MELF 4.7K 5% 1/8W
R108	1-249-323-11	CARBON MELF 100 5% 1/8W
R109	1-249-343-11	CARBON MELF 4.7K 5% 1/8W
R110	⚠1-249-405-11	RES, CARBON (SMALL) 100 5% 1/4W F
R501	1-202-725-00	(JX401:US)...SOLID 3.3M 10% 1/2W
R502	1-249-437-11	(JX401)...CARBON 47K 5% 1/4W
R503	⚠1-247-752-11	(JX401)...CARBON 1K 5% 1/2W F
R504	1-249-393-11	(JX401)...CARBON 10 5% 1/4W
R505	1-249-441-11	(JX401)...CARBON 100K 5% 1/4W
R601	1-249-393-11	(JX301)...CARBON 10 5% 1/4W
R602	⚠1-247-741-11	(JX301)...CARBON 150 5% 1/2W
R603	1-249-429-11	(JX301)...CARBON 10K 5% 1/4W
R604	1-249-429-11	(JX301)...CARBON 10K 5% 1/4W
R605	1-249-435-11	(JX301)...CARBON 33K 5% 1/4W
R606	1-249-438-11	(JX301)...CARBON 56K 5% 1/4W
R607	1-249-441-11	(JX301)...CARBON 100K 5% 1/4W

Ref.No.	Part No.	Description
R690	⚠1-212-942-00	(JX301)...FUSIBLE 2.2 5% 1/2W
R701	1-249-405-11	CARBON 100 5% 1/4W
R702	1-249-441-11	CARBON 100K 5% 1/4W
R703	1-249-441-11	CARBON 100K 5% 1/4W
R704	1-249-441-11	CARBON 100K 5% 1/4W
R709	1-249-417-11	CARBON 1K 5% 1/4W
R710	1-249-411-11	CARBON 330 5% 1/4W
R711	1-249-411-11	CARBON 330 5% 1/4W
R712	1-249-429-11	CARBON 10K 5% 1/4W
R713	1-249-429-11	CARBON 10K 5% 1/4W
R714	1-249-429-11	CARBON 10K 5% 1/4W
R715	1-249-429-11	CARBON 10K 5% 1/4W
R716	1-249-429-11	CARBON 10K 5% 1/4W
R717	1-249-429-11	CARBON 10K 5% 1/4W
R718	1-249-429-11	CARBON 10K 5% 1/4W
R719	1-249-429-11	CARBON 10K 5% 1/4W
R720	1-249-441-11	CARBON 100K 5% 1/4W
R721	1-249-441-11	CARBON 100K 5% 1/4W
RV21	1-238-013-11	RES, ADJ, CARBON 2.2K
RV22	1-238-017-11	RES, ADJ, CARBON 22K
RV24	1-238-017-11	RES, ADJ, CARBON 22K
S1	⚠1-554-920-11	(JX401)..SWITCH, PUSH(AC POWER)(1 KEY)
S701	1-554-303-21	SWITCH, KEY BOARD (1)
S702	1-554-303-21	SWITCH, KEY BOARD (2)
S703	1-554-303-21	SWITCH, KEY BOARD (3)
S704	1-554-303-21	SWITCH, KEY BOARD (4)
S705	1-554-303-21	SWITCH, KEY BOARD (5)
S706	1-554-303-21	SWITCH, KEY BOARD (6)
S707	1-554-303-21	SWITCH, KEY BOARD (7)
S708	1-554-303-21	SWITCH, KEY BOARD (8)
S709	1-554-303-21	SWITCH, KEY BOARD (9)
S710	1-554-303-21	SWITCH, KEY BOARD (0)
S711	1-554-303-21	SWITCH, KEY BOARD (AUTO TUNING)
S712	1-554-303-21	SWITCH, KEY BOARD (MEMORY SCAN)
S713	1-554-303-21	SWITCH, KEY BOARD (MEMORY)
S714	1-554-303-21	SWITCH, KEY BOARD (SHIFT)
S715	1-554-303-21	SWITCH, KEY BOARD (BAND FM/AM)
S716	1-554-303-21	SWITCH, KEY BOARD (TUNING +)
S717	1-554-303-21	SWITCH, KEY BOARD (TUNING -)
T21	1-404-807-11	TRANSFORMER, DISCRIMINATOR
TB501	*1-535-141-00	(JX401:US)..BASE POST 22MM(10MM PITCH)4P
TB501	*1-535-142-00	(JX401:E)...BASE POST 22MM(10MM PITCH)5P
TM1	1-537-238-21	TERMINAL BOARD, PUSH 4P
TP1	*1-560-060-00	PIN, CONNECTOR 2P
VS1	⚠1-570-046-21	(JX401:E)...SWITCH, VOLTAGE CHANGE
XT81	1-577-126-11	VIBRATOR, CRYSTAL

Note:
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Note:
Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

ACCESSORY & PACKING MATERIAL

1-501-374-11 (JX401)...ANTENNA, LOOP
1-558-232-11 (JX401)...ACORD(WITH CONNECTOR)(SIRCS)4P
1-559-533-11 (JX401)...CORD, CONNECTION

3-751-442-11 (JX401:E)....MANUAL, INSTRUCTION
3-751-442-21 (JX401:US)...MANUAL, INSTRUCTION

*4-917-074-01 CUSHION
*4-917-075-01 (JX401)...INDIVIDUAL CARTON

9-955-781-11

Sony Corporation
Audio Group

English
90C0640-1
Printed in Japan
©1990.3
Published by Customer Relations and Service Group

ST-JX295/JX390

SERVICE MANUAL

US Model
E Model
ST-JX295/JX390

Canadian Model
ST-JX295

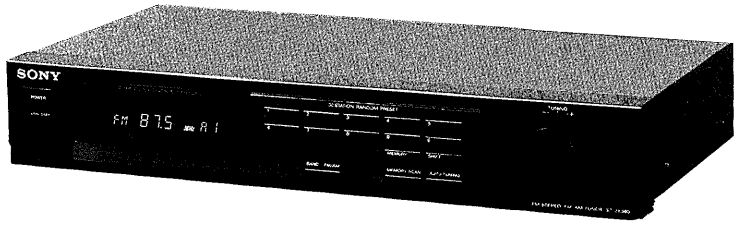

Photo: ST-JX390

ST-JX290: This set is the tuner section in SEN-290 (CND, E)/SEN-390 (US).

SPECIFICATIONS

FM tuner

Frequency range 87.5 — 108 MHz
Antenna terminal 300 ohms, balanced
75 ohms, unbalanced
IF 10.7 MHz
Sensitivity

S/N 50 dB sensitive	Mono	22.1 dBf (7 μV)
	Stereo	42.1 dBf (70 μV)
Usable sensitivity (IHF)		19.5 dBf (5 μV)

Signal-to-noise ratio 80 dB (mono), 75 dB (stereo)
Harmonic distortion 0.3% (mono), 0.5% (stereo) at 1 kHz
Separation 40 dB (1 kHz)
Frequency response 30 Hz — 15 kHz $^{+0.5}_{-2.0}$ dB
Selectivity 55 dB (400 kHz)
AM suppression ratio 54 dB
Image response ratio 50 dB
IF response ratio 90 dB
Spurious response ratio 70 dB
Automatic tuning threshold 17.8 μV (30 dBf)
Output 775 mV, 4.7 kohms (at 75 kHz deviation) (ST-JX390)

AM tuner

Frequency range
- 530 — 1,710 kHz (10 kHz)
- 531 — 1,710 kHz (9 kHz)
} US/CA Model

- 530 — 1,710 kHz (10 kHz)
- 531 — 1,602 kHz (9 kHz)
} E Model

Antenna Loop antenna, External antenna terminal
IF 450 kHz
Sensitivity (999 kHz or 1,000 kHz)
500 μV/m (when the loop antenna is in use)
Signal-to-noise ratio 54 dB (mono, normal)
Harmonic distortion 0.5% (mono, normal)
Selectivity 35 dB (9 kHz, normal)
38 dB (10 kHz, normal)
Frequency response 40 Hz — 3.5 kHz $^{0}_{+6}$ dB (normal)

General

Power requirements 120 V AC, 60 Hz
Power consumption 8 W
} ST-JX390

Dimensions Approx. 430 × 80 × 260 mm (w/h/d)
(17 × 3 1/4 × 10 1/4 inches)
Weight Approx. 2.4 kg (5 lb 5 oz) (ST-JX390)
Approx. 2.0 kg (4 lb 7 oz) (ST-JX295)

Supplied accessories (ST-JX390)

Remote control cord (1)
Connecting cord (1)
FM wire antenna (1)
AM loop antenna (1)

Design and specifications subject to change without notice.

Sony Corporation Printed in

使用時は添付資料も参照のこと
Refer to the additional documents.

FM STEREO/FM-AM TUNER

SONY®

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety check before releasing the set to the customer:
Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microampers). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

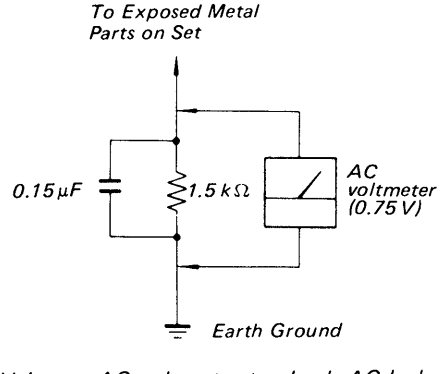

Fig. A. Using an AC voltmeter to check AC leakage.

TABLE OF CONTENTS

Section	Title	Page
	Specification	1
	Safety Check-out	2
1.	**GENERAL**	3
2.	**ELECTRICAL ADJUSTMENT**	
	FM Section	4
	AM Section	4
3.	**DIAGRAM**	
3-1.	Block Diagram	5
3-2.	Printed Wiring Boards	10
3-3.	Schematic Diagram	15
4.	**EXPLODED VIEWS**	21
5.	**ELECTRICAL PARTS LIST**	22

To change the AM tuning interval

The AM tuning interval is preset at the factory to 10 kHz to match the frequency allocation system of your country. To change the interval to 9 kHz, proceed as follows.

1 Depress the POWER switch to turn on the unit.
2 Set the BAND FM/AM selector to AM.
3 Press the POWER switch to turn off the unit.
4 Hold the TUNING knob in the "+" position, and depress the POWER switch to turn on the unit. To reset the interval to 10 kHz, follow the same procedure.

Note

When the interval is changed, all preset stations which you have memorized using the numeric buttons will be erased from the memory. After changing the interval, be sure to preset the stations again.

Storing Station Frequencies into Memory

1 Tune in a desired station.

2



3 Allot one of the following codes:

A-1, A-2, ...A-0,
B-1, ...B-0,
C-1, ...C-9, C-0

First, select alphabet.

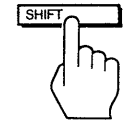

4 Select number.

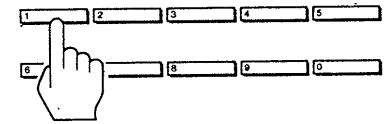

Scanning Stored Stations — Memory Scanning

1

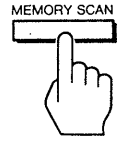

The code indication flashes in the window.

2

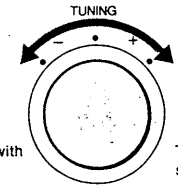

To scan stations with preceding codes.

To scan stations with succeeding codes.

Stored stations are tuned in successively.

3 As soon as the desired station is received:

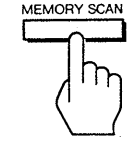

Scanning stops.

More information on storing stations

How many stations can be stored?
Up to 10 stations can be stored in any order for each alphabet (A, B, C). Therefore, 30 stations can be stored in total.

If you cannot store a station successfully
You can store a station only while "MEMORY" is displayed. If the "MEMORY" indication has gone off, press MEMORY again.

How long does a station remain stored?
- Storing a new station on a used code erases the previously stored one.
- The stored station is maintained for approximately one month even if the power remains off.

More information on scanning stored stations

Which stations are skipped during memory scanning?
The memory scan will skip stations which have a very weak signal.

If you cannot scan successfully
Turn the TUNING knob while the code indication is flashing. If the flashing has stopped, press MEMORY SCAN again.

SECTION 2
ELECTRICAL ADJUSTMENT

FM SECTION

• FM Discriminator Alignment (NULL check)

Setting :

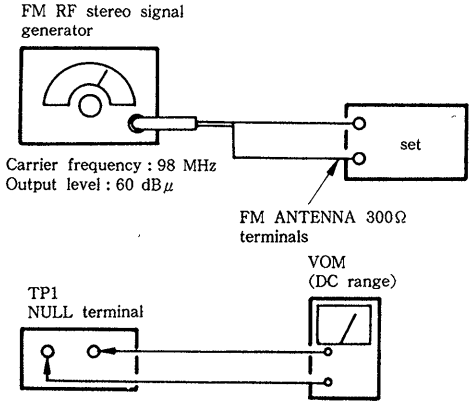

Procedure :

1. Tune the set to 98 MHz.
2. Adjust T21 for 0 V reading on the VOM.

Note : FM TUNING LEVEL adjustment should be macle after FM discriminator alignment.

• FM TUNING LEVEL Adjustment

Setting :

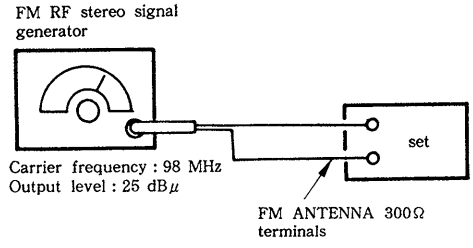

Procedure :

1. Tune the set to 98 MHz.
2. Adjust RV24 so that the TUNED LED goes on.

• FM Stereo Separation Adjustment

Setting :

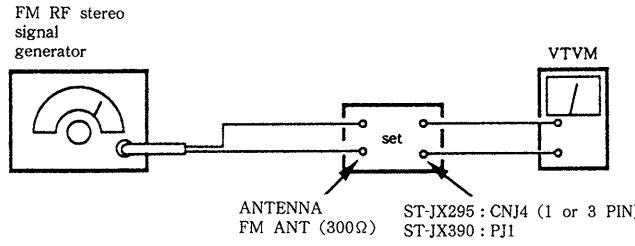

Carrier frequency : 98 MHz
Output level : 60 dBμ

Procedure :

Tune the set to 98 MHz.

FM stereo signal generator output channel	VTVM connection	VTVM reading (dB)
L-CH	L-CH	(A)
R-CH	L-CH	(B) Adjust RV21 for minimum reading.
R-CH	R-CH	(C)
L-CH	R-CH	(D) Adjust RV21 for minimum reading.

L-CH Stereo separation : (A) − (B)
R-CH Stereo separation : (C) − (D)

The separations of both channels should be equal.

AM SECTION

• AM Tuned Indication Lighting Level Adjustment

Setting :

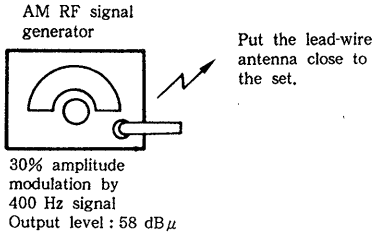
AM RF signal generator
Put the lead-wire antenna close to the set.
30% amplitude modulation by 400 Hz signal
Output level : 58 dBμ

Procedure :

1. Tune the set to 1,050 kHz (US, CANADIAN), 999 kHz (E).
2. Adjust RV22 so that the TUNED LED goes on.

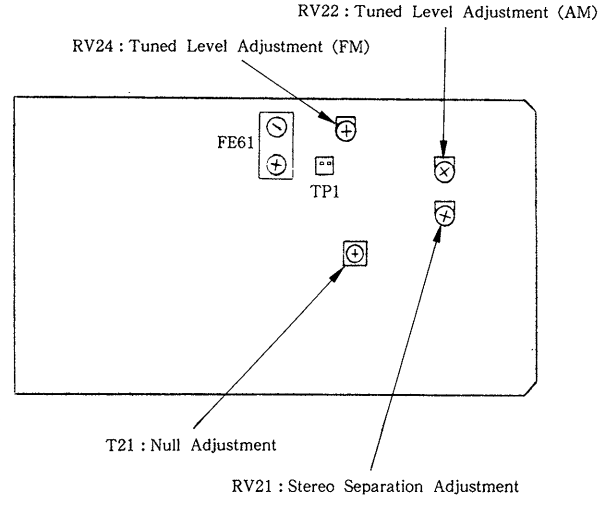

SECTION 3
DIAGRAMS

3-1. BLOCK DIAGRAMS

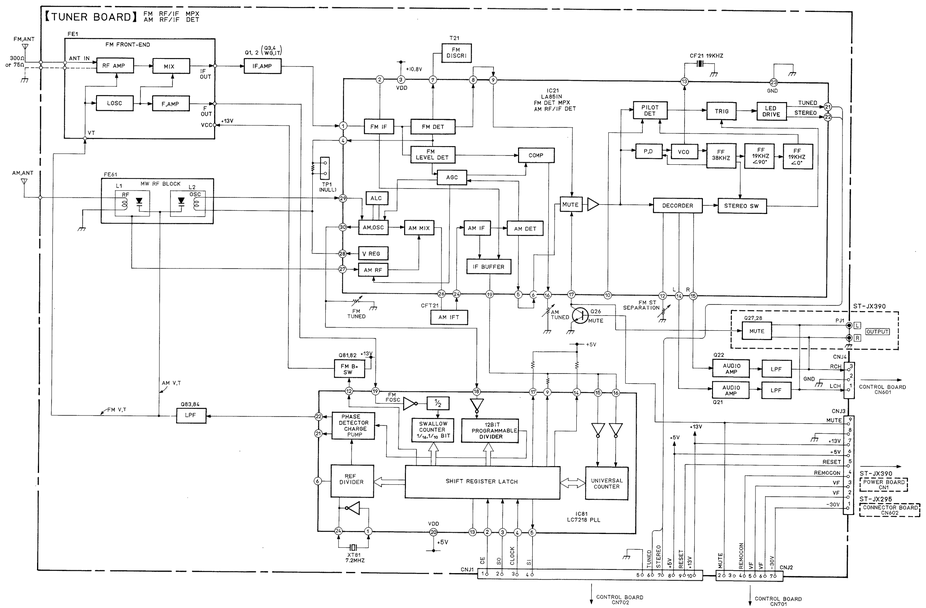

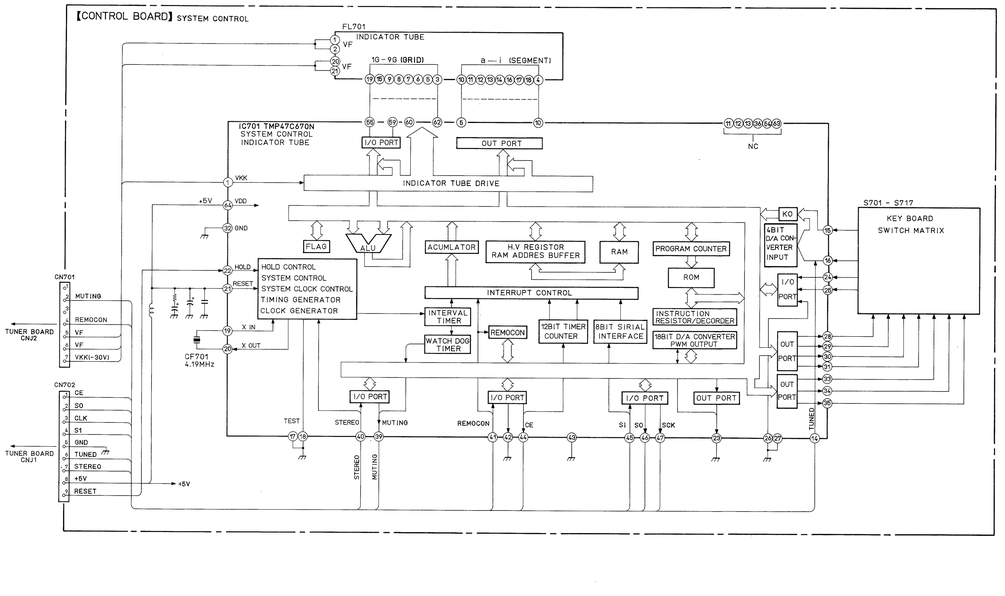

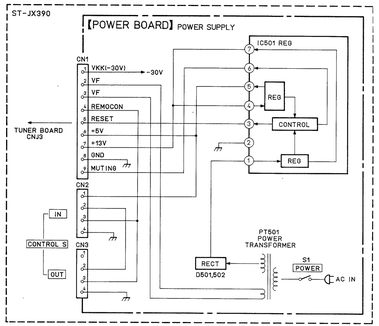

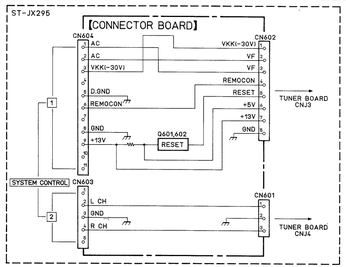

3-2. PRINTED WIRING BOARDS

Note :

- Color code or sleeving over the end of the jacket.

- ○——: parts extracted from the component side.
- □·: indicates side identified with part number.

[Note on Inserting the Cord to the Connector on Tuner Board]

- Insert the cord to the connector fitting Pin ① of the cord in accordance with the white mark on the board at the connector as shown in the figure,

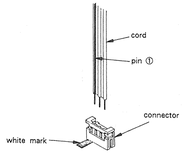

- **Semiconductor Location**

Ref. No.	Location
D21	H-8
D22	I-8
D23	I-8
D24	H-9
D501	D-19
D502	D-19
D503	D-19
D504	D-19
D505	E-18
D506	E-19
D507	B-16
D601	H-12
D602	H-11
D603	H-13
D701	B-13
D702	C-9
D703	C-7
D707	C-2
D708	B-2
D709	B-2
D710	B-8
D711	B-7
D712	B-6
D713	B-5
D714	B-4
D715	B-3
D716	C-3
D717	C-3
D718	C-2
IC21	H-7
IC81	F-4
IC501	B-19
IC701	B-11
Q1	G-4
Q2	G-5
Q22	G-8
Q21	G-8
Q26	I-8
Q27	G-8
Q28	H-8
Q81	G-6
Q82	G-6
Q83	F-3
Q84	F-3
Q601	H-11
Q602	H-12

- **Semiconductor Lead Layouts**

BA1L4M
2SC2785

EQA02-30B
US1060M
10E2N

LA5667

TMP47C670N-1282



DTC114ES
2SA1348
2SC2669

LA1851N

LC7218

2SC3112

RD5.6ES-B2
UZL-6L2

2SK246GR3

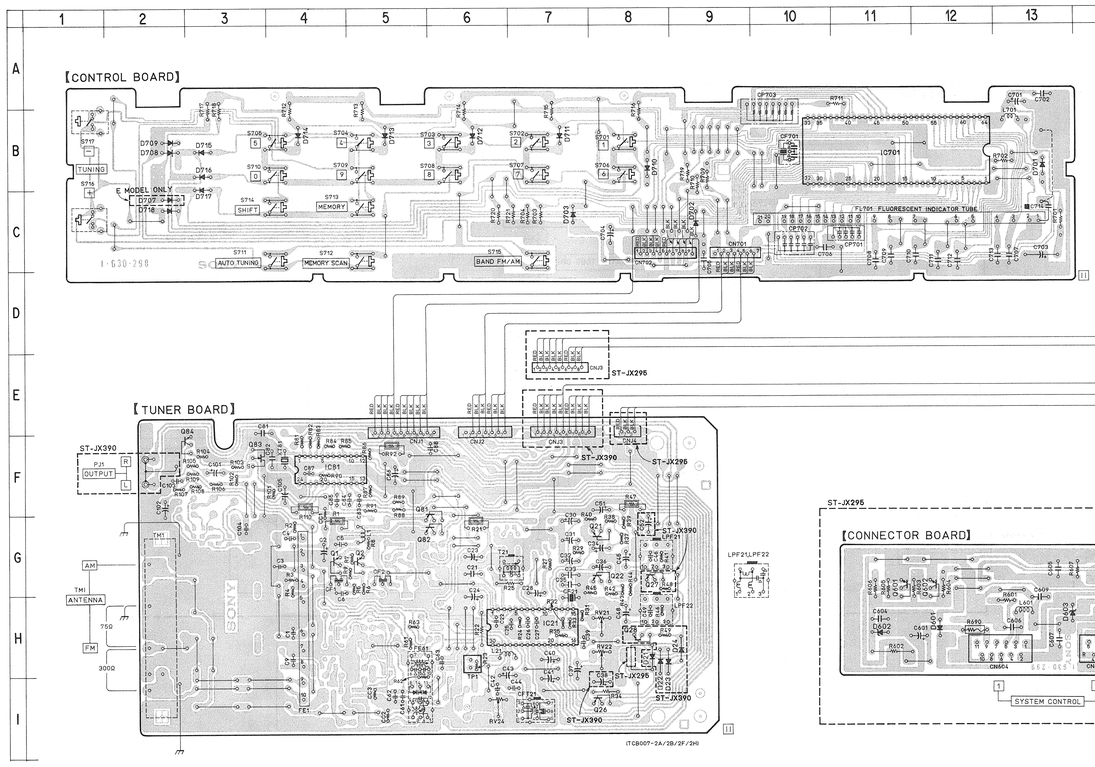

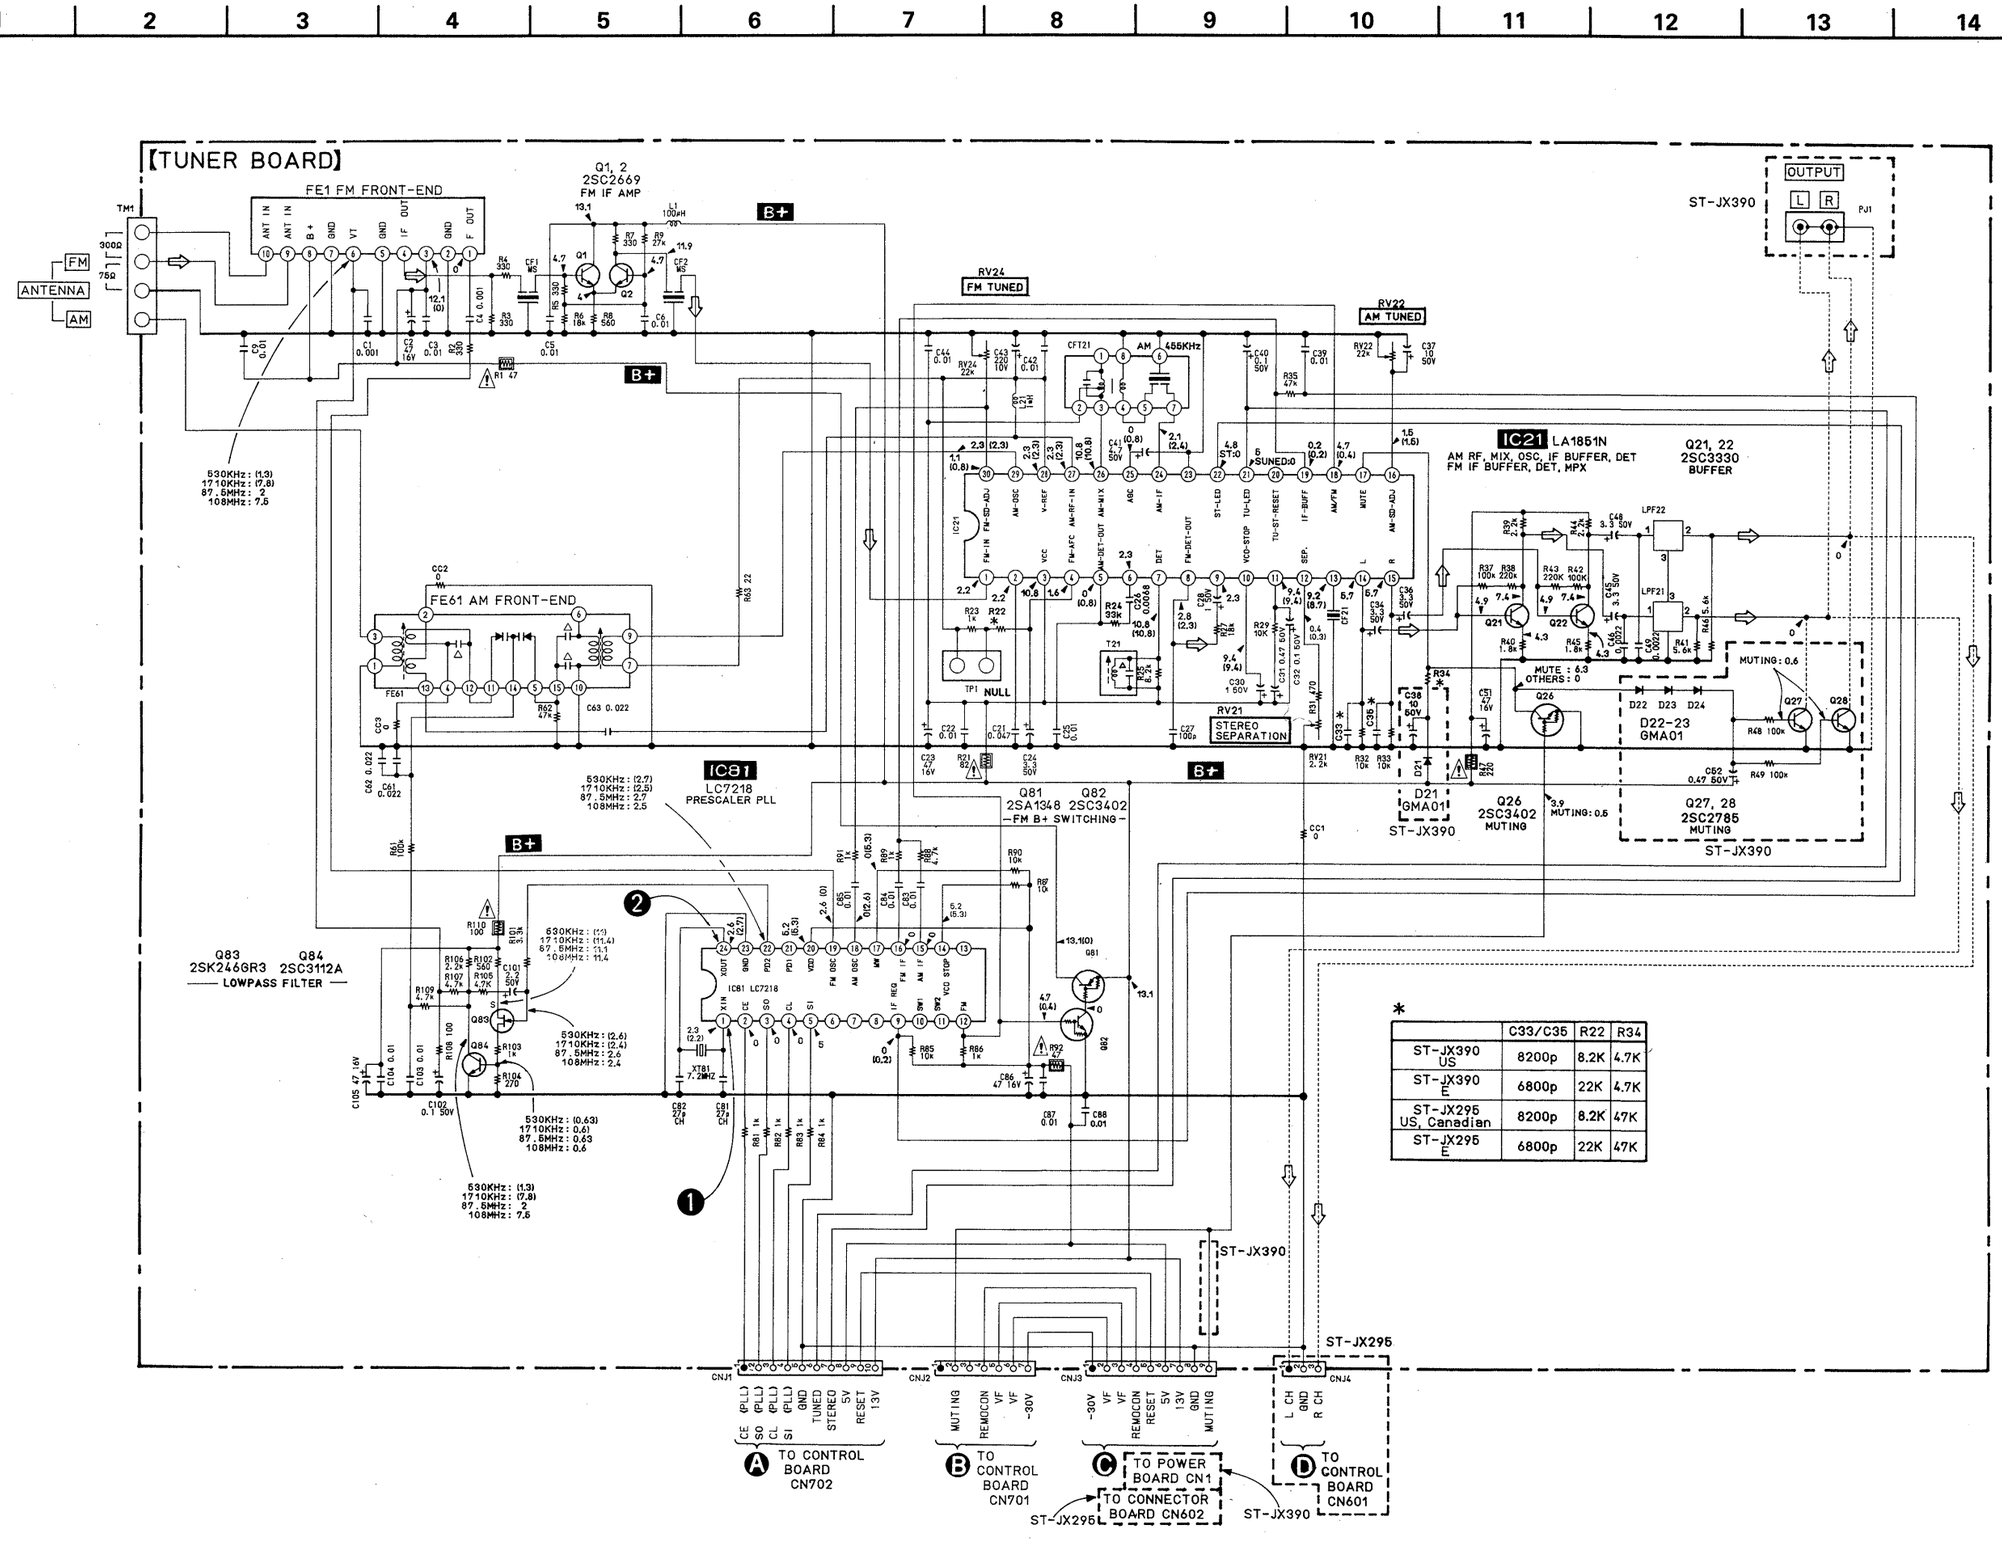

*

	C33/C35	R22	R34
ST-JX390 US	8200p	8.2K	4.7K
ST-JX390 E	6800p	22K	4.7K
ST-JX295 US, Canadian	8200p	8.2K	47K
ST-JX295 E	6800p	22K	47K

● **FE1(Front End) Schematic Diagram**

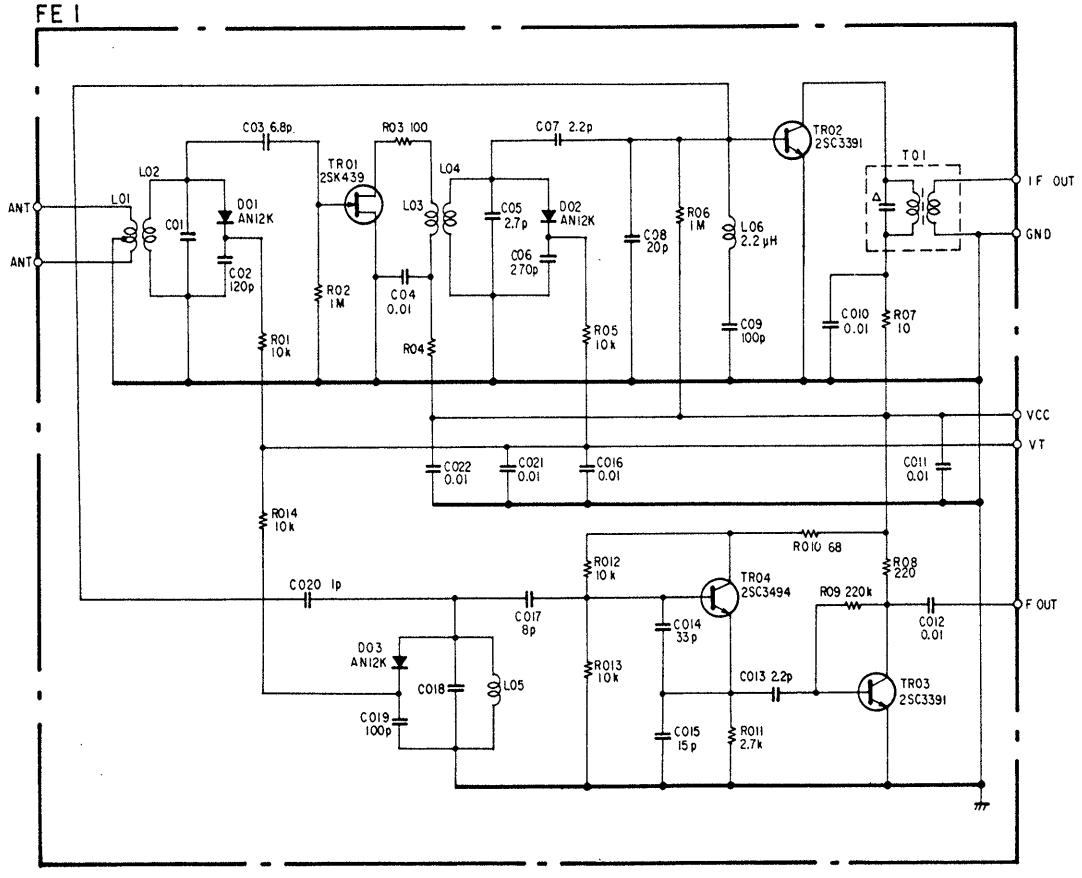

● **Wave Forms**

No.	Wave Forms	No.	Wave Forms
①	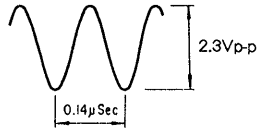	③	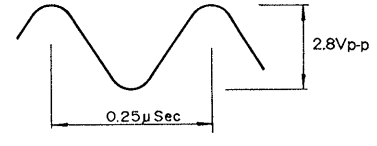
②	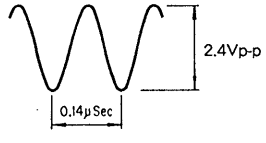	④	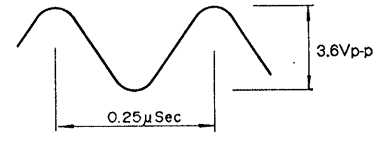
		⑤	

3-4. SCHEMATIC DIAGRAM — Control and Power Section —

Note :

- All capacitors are in μF unless otherwise noted. pF : μμF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and ¼ W or less unless otherwise specified.
- △ : internal component.
- ⊣⊢ : nonflammable resistor.
- ⊣⊢ : fusible resistor.

Note :	**Note :**
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la securite. Ne les remplacer que par une pièce portant le numéro specifié.

- B+ : B+ Line.
- B− : B− Line.
- ▭ : adjustment for repair.
- Voltage and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- no mark : FM
- ( ) : AM
- Voltage are taken with a VOM (Input impedance 10 MΩ). Voltage variations may be noted due to normal production tolerances.
- Wavefroms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to wavefroms.
- Signal path. ⇨ : FM

[Service Note]

INDICATOR TUBE ALL LIGHT-UP MODE
When turning POWER switch on while pressing PRESET 1 and AUTO TUNING KEYS simultaneously, all the segments of FL701 will light.

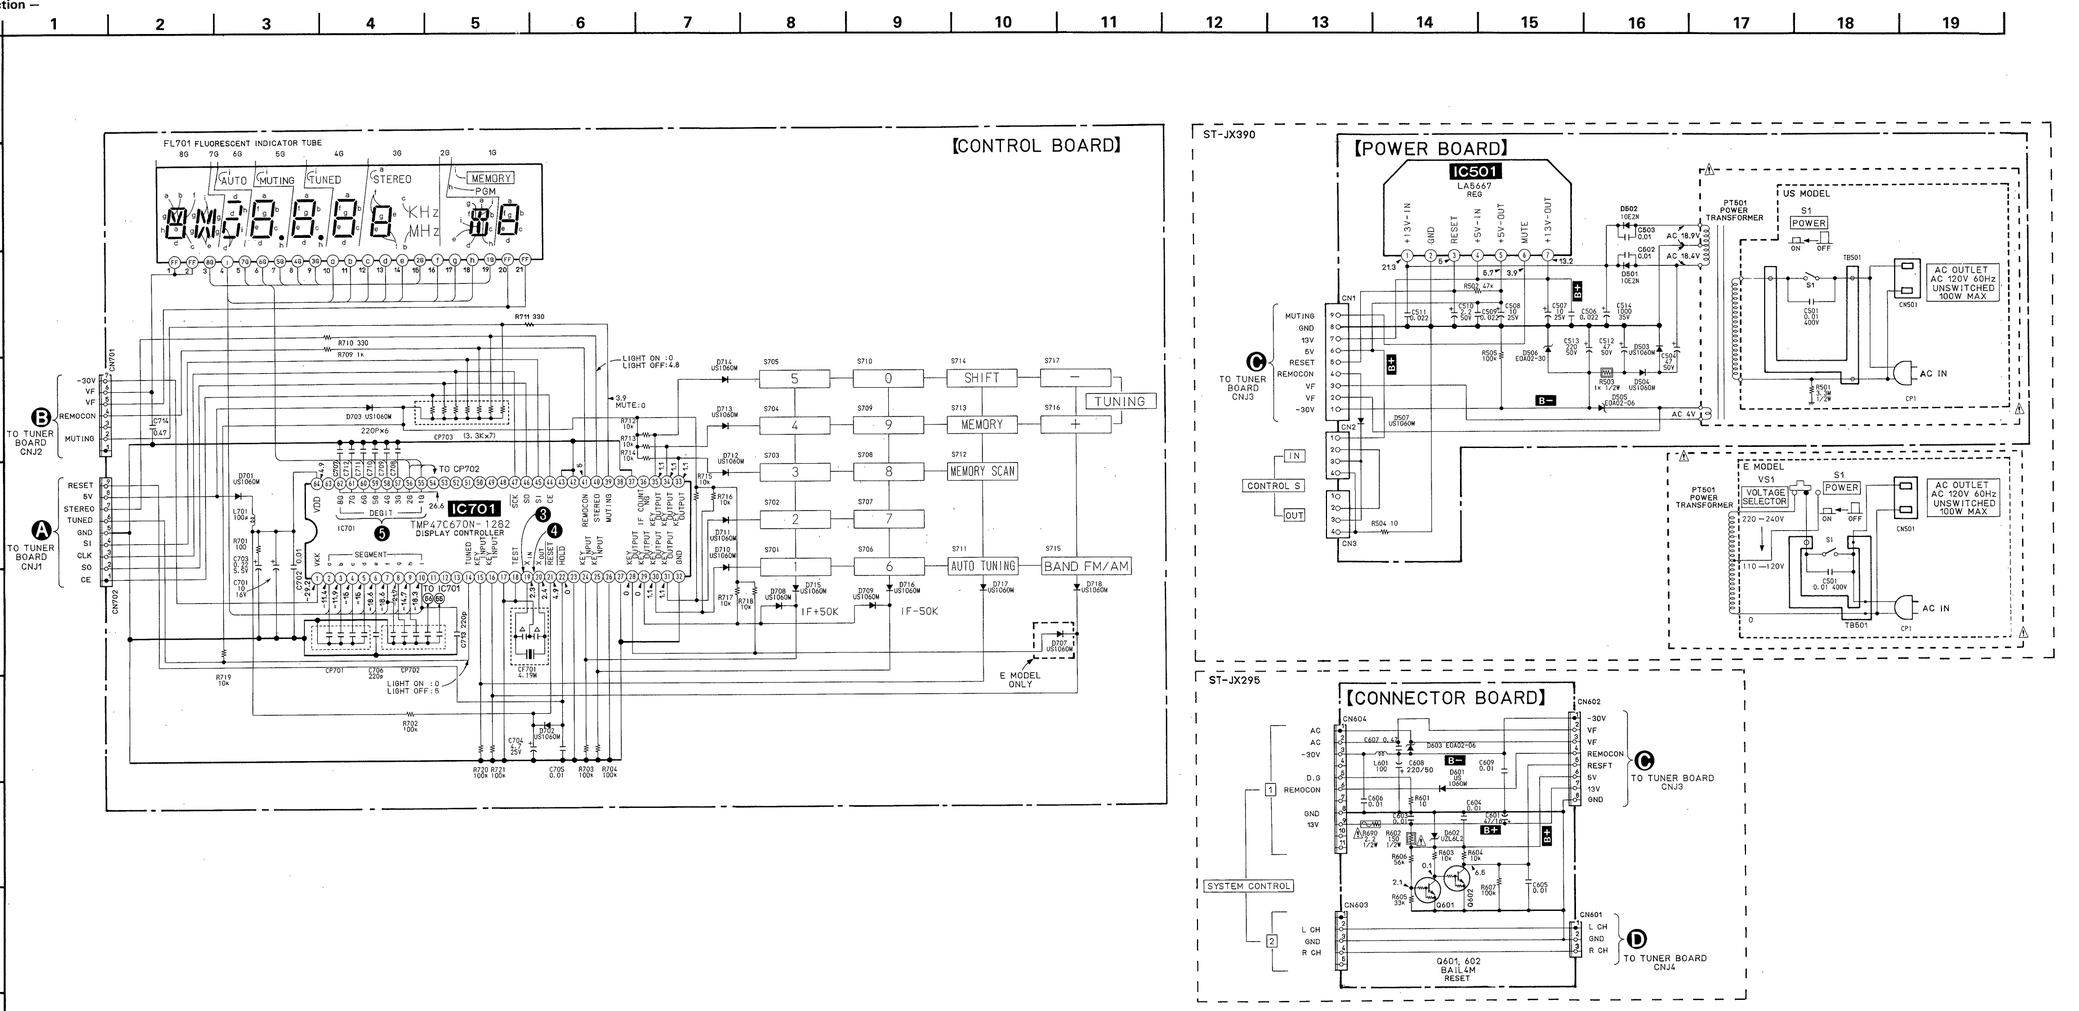

SECTION 4
EXPLODED VIEW

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part number suffix -XX and -X may be different from the parts specified in the components used on the set.
- Color Indication of Appearance Parts
  Example:
  (RED) . . . KNOB, BALANCE (WHITE)
  ↑ ↑
  Cabinet's Color Parts' Color

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifé.

(1)

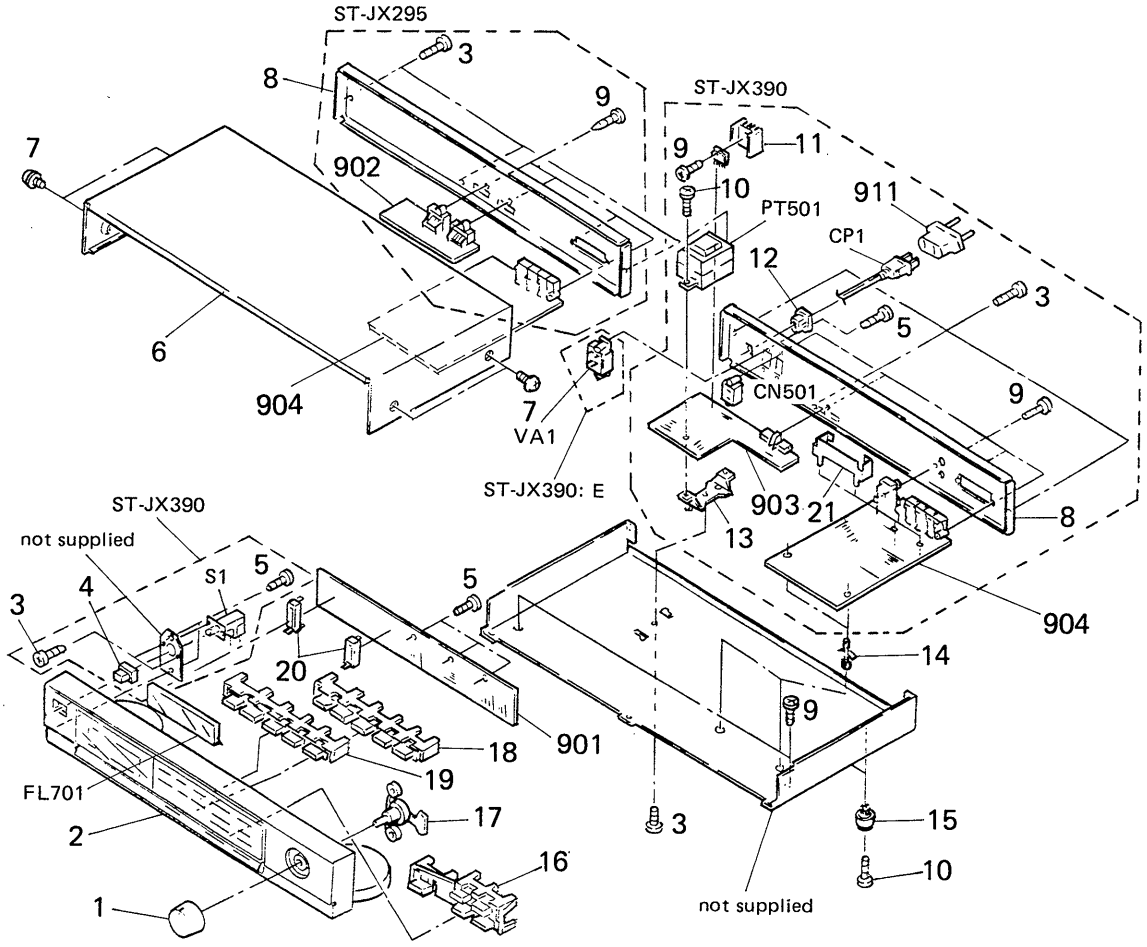

No.	Part No.	Description	Remarks
1	4-922-790-11	KNOB (TUNING)	
2	X-4905-263-1	(JX295)...PANEL ASSY, FRONT	
	X-4905-264-1	(JX390)...PANEL ASSY, FRONT	
3	7-682-548-04	SCREW +BVTT 3X8 (S)	
4	4-917-460-01	(JX390)...KNOB, POWER	
5	7-685-534-19	SCREW +BTP 2.6X8 TYPE2 N-S	
6	4-917-050-41	CASE	
7	3-704-366-01	SCREW (CASE) (M3X8)	
8	*4-917-058-01	(JX295).....PANEL, BACK	
	*4-917-065-01	(JX390:US)...PANEL, BACK	
	*4-917-065-11	(JX390:E)....PANEL, BACK	
9	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S	
10	7-682-550-04	SCREW +BVTT 3X12 (S)	
11	*4-363-146-31	(JX390)...HEAT SINK, V.OUT	
12	*3-703-244-00	(JX390:US)...BUSHING (2104), CORD	
	*3-703-571-12	(JX390:E)....BUSHING (4516), CORD	
13	*4-917-044-11	(JX390)...BRACKET (PT)	
14	*3-346-265-11	HOLDER, PC BOARD	
15	X-4904-496-1	FOOT ASSY	
16	4-917-063-01	BUTTON (T)	
17	*4-917-061-01	SHAFT, TUN	
18	4-917-064-11	BUTTON (10 KEY)(6-0)	
19	4-917-064-01	BUTTON (10 KEY)(1-5)	
20	*4-924-989-01	HOLDER (FL TUBE)	
21	*4-924-988-11	PLATE (ST), GROUND	
901	*A-4333-249-A	(JX295:US,Canadian)	
		...MOUNTED PCB, CONTROL	
	*A-4333-250-A	(JX295:E)....MOUNTED PCB, CONTROL	
	*A-4333-480-A	(JX390:E)....MOUNTED PCB, CONTROL	
	*A-4333-481-A	(JX390:US)...MOUNTED PCB, CONTROL	
902	*1-630-299-11	(JX295)...PC BOARD, CONNECTOR	
903	*1-630-297-11	(JX390)...PC BOARD, POWER	
904	*A-4303-176-A	(JX295:US Canadian)...MOUNTED PCB TUNER	
	*A-4303-177-A	(JX295:E).....MOUNTED PCB TUNER	
	*A-4303-174-A	(JX390:US).....MOUNTED PCB TUNER	
	*A-4303-175-A	(JX390:E).....MOUNTED PCB TUNER	
911	⚠1-526-565-12	(JX390:E)...AC PLUG ADAPTOR	
CN501	⚠1-540-038-11	(JX390:E)....OUTLET, AC (NONPOLAR)	
CN501	⚠1-540-057-11	(JX390:US)...OUTLET, AC (POLAR)	
CP1	⚠1-551-188-XX	(JX390:E)....CORD, POWER	
CP1	⚠1-557-577-11	(JX390:US)...CORD, POWER	
FL701	1-519-512-11	INDICATOR TUBE, FLUORESCENT	
PJ1	1-565-352-21	(JX390)...JACK, PIN 2P	
PT501	⚠1-449-526-11	(JX390:E)....TRANSFORMER, POWER	
PT501	⚠1-449-527-11	(JX390:US)...TRANSFORMER, POWER	
S1	⚠1-554-920-11	(JX390)..SWITCH, PUSH (AC POWER)(1 KEY)	
VS1	⚠1-570-046-21	(JX390:E)....SWITCH, VOLTAGE CHANGE	

SECTION 5
ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:
MF: μF, PF: μμF.

RESISTORS
- All resistors are in ohms.
- F: nonflammable

COILS
- MMH: mH, UH: μH

SEMICONDUCTORS
In each case, U: μ, for example:
UA...: μA..., UPA...: μPA...,
UPC...: μPC, UPD...: μPD...

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No.	Part No.	Description
901	*A-4333-249-A	(JX295:US,Canadian) ...MOUNTED PCB, CONTROL
	*A-4333-250-A	(JX295:E)....MOUNTED PCB, CONTROL
	*A-4333-480-A	(JX390:E)....MOUNTED PCB, CONTROL
	*A-4333-481-A	(JX390:US)...MOUNTED PCB, CONTROL
902	*1-630-299-11	(JX295)...PC BOARD, CONNECTOR
903	*1-630-297-11	(JX390)...PC BOARD, POWER
904	*A-4303-176-A	(JX295:US Canadian)...MOUNTED PCB TUNER
	*A-4303-177-A	(JX295:E).....MOUNTED PCB TUNER
	*A-4303-174-A	(JX390:US).....MOUNTED PCB TUNER
	*A-4303-175-A	(JX390:E).....MOUNTED PCB TUNER
911	⚠1-526-565-12	(JX390:E)...AC PLUG ADAPTOR
C1	1-162-294-31	CERAMIC CHIP 0.001MF 20% 25V
C2	1-124-477-11	CAP, ELECT 47MF 20% 16V
C3	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C4	1-162-294-31	CERAMIC CHIP 0.001MF 20% 25V
C5	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C6	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C9	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C21	1-161-021-11	CAP, CERAMIC 0.047MF 10% 25V
C22	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C23	1-124-477-11	CAP, ELECT 47MF 20% 16V
C24	1-123-382-00	CAP, ELECT 3.3MF 20% 50V
C25	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C26	1-162-527-11	CERAMIC CHIP 0.0068MF 20% 12V
C27	1-162-516-11	CERAMIC CHIP 100PF 10% 50V
C28	1-124-499-11	CAP, ELECT 1.0MF 20% 50V
C30	1-124-499-11	CAP, ELECT 1.0MF 20% 50V
C31	1-124-902-00	CAP, ELECT 0.47MF 20% 50V
C32	1-124-463-00	CAP, ELECT 0.1MF 20% 50V
C33	1-130-481-91	(JX390/JX295:E)...CAP,PE TEREPHTHALATE 00068MF 5% 50V
C33	1-130-482-00	(JX390:US/JX295:US,Canadian)... CAP, PE TEREPHTHALATE 0.0082MF 5% 50V
C34	1-123-382-00	CAP, ELECT 3.3MF 20% 50V
C35	1-130-481-91	(JX390/JX295:E)...CAP,PE TEREPHTHALATE 00068MF 5% 50V
C35	1-130-482-00	(JX390:US/JX295:US,Canadian)... CAP, PE TEREPHTHALATE 0.0082MF 5% 50V
C36	1-123-382-00	CAP, ELECT 3.3MF 20% 50V
C37	1-123-875-11	CAP, ELECT 10MF 20% 50V
C38	1-123-875-11	(JX390)...CAP,ELECT 10MF 20% 50V
C39	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C40	1-124-463-00	CAP, ELECT 0.1MF 20% 50V
C41	1-124-927-11	CAP, ELECT 4.7MF 20% 50V
C42	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C43	1-126-176-11	CAP, ELECT 220MF 20% 10V
C44	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C45	1-123-382-00	CAP, ELECT 3.3MF 20% 50V
C46	1-162-524-11	CERAMIC CHIP 0.0022MF 20% 25V
C48	1-123-382-00	CAP, ELECT 3.3MF 20% 50V
C49	1-162-524-11	CERAMIC CHIP 0.0022MF 20% 25V
C51	1-124-477-11	CAP, ELECT 47MF 20% 16V
C52	1-124-902-11	(JX390)...CAP,ELECT 0.47MF 20% 50V
C61	1-163-063-00	CERAMIC MELF 0.022MF 25V
C62	1-163-063-00	CERAMIC MELF 0.022MF 25V
C63	1-163-063-00	CERAMIC MELF 0.022MF 25V
C64	1-163-063-00	CERAMIC MELF 0.022MF 25V
C81	1-102-961-00	CAP, CERAMIC 27PF 5% 50V
C82	1-102-961-00	CAP, CERAMIC 27PF 5% 50V
C83	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C84	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C85	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C86	1-124-477-11	CAP, ELECT 47MF 20% 16V
C87	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C88	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C101	1-124-925-11	CAP, ELECT 2.2MF 20% 50V
C102	1-124-463-00	CAP, ELECT 0.1MF 20% 50V
C105	1-124-477-11	CAP, ELECT 47MF 20% 16V
C103	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C104	1-163-059-00	CERAMIC MELF 0.01MF 20% 16V
C501	⚠1-161-744-00	CERAMIC 0.01MF 400V
C502	1-101-004-00	CERAMIC 0.01MF 50V
C503	1-101-004-00	CERAMIC 0.01MF 50V
C504	1-124-910-11	ELECT 47MF 20% 50V
C506	1-101-005-00	CERAMIC 0.022MF 50V
C507	1-123-356-00	ELECT 10MF 20% 25V
C508	1-123-356-00	ELECT 10MF 20% 25V
C509	1-101-005-00	CERAMIC 0.022MF 50V
C510	1-124-925-11	ELECT 2.2MF 20% 50V
C511	1-101-005-00	CERAMIC 0.022MF 50V
C512	1-124-910-11	ELECT 47MF 20% 50V
C513	1-124-911-11	ELECT 220MF 20% 50V
C514	1-126-105-11	ELECT 1000MF 20% 35V
C601	1-123-332-00	(JX295)...ELECT 47MF 20% 16V
C603	1-101-004-00	(JX295)...CERAMIC 0.01MF 20% 50V
C604	1-101-004-00	(JX295)...CERAMIC 0.01MF 20% 50V
C605	1-101-004-00	(JX295)...CERAMIC 0.01MF 20% 50V
C606	1-101-004-00	(JX295)...CERAMIC 0.01MF 20% 50V
C607	1-136-173-00	(JX295)...FILM 0.47MF 5% 50V
C608	1-124-122-11	(JX295)...ELECT 100MF 20% 50V
C609	1-101-004-00	(JX295)...CERAMIC 0.01MF 20% 50V
C701	1-126-157-11	ELECT 10MF 20% 16V
C702	1-161-379-00	CERAMIC 0.01MF 30% 16V
C703	1-125-486-11	CAP,DOUBLELAYEKS 0.22F 5.5V
C704	1-126-094-11	ELECT 4.7MF 20% 25V
C705	1-161-379-00	CERAMIC 0.01MF 30% 16V

Ref.No.	Part No.	Description			
C706	1-162-286-31	CERAMIC	220PF	10%	50V
C707	1-162-286-31	CERAMIC	220PF	10%	50V
C708	1-162-286-31	CERAMIC	220PF	10%	50V
C709	1-162-286-31	CERAMIC	220PF	10%	50V
C710	1-162-286-31	CERAMIC	220PF	10%	50V
C711	1-162-286-31	CERAMIC	220PF	10%	50V
C712	1-162-286-31	CERAMIC	220PF	10%	50V
C713	1-162-286-31	CERAMIC	220PF	10%	50V
C714	1-136-173-00	FILM	0.47MF	5%	50V
CC1	1-249-366-11	CARBON MELF	0	5%	1/5W
CC2	1-249-366-11	CARBON MELF	0	5%	1/5W
CC3	1-249-366-11	CARBON MELF	0	5%	1/5W
CF1	1-567-389-11	FILTER, CERAMIC			
CF2	1-567-389-11	FILTER, CERAMIC			
CF21	1-577-075-11	OSCILLATOR, CERAMIC			
CF701	1-577-359-21	VIBRATOR, CERAMIC			
CFT21	1-404-853-11	TRANSFORMER,IF (CERAMIC FILTER)			
CN1	*1-568-284-11	SOCKET, CONNECTOR 9P			
CN2	1-564-980-11	(JX390)...PIN, CONNECTOR 4P			
CN3	1-564-980-11	(JX390)...PIN, CONNECTOR 4P			
CN501⚠	1-540-038-11	(JX390:E)...OUTLET, AC (NONPOLAR)			
CN501⚠	1-540-057-11	(JX390:US)...OUTLET, AC (POLAR)			
CN601	1-568-278-11	(JX295)...SOCKET, CONNECTOR 3P			
CN602	1-568-283-11	(JX295)...SOCKET, CONNECTOR 8P			
CN603	1-566-856-11	(JX295)...SOCKET, CONNECTOR 5P			
CN604	1-566-858-11	(JX295)...SOCKET, CONNECTOR 11P			
CN701	1-568-282-11	SOCKET, CONNECTOR 7P			
CN702	*1-568-284-11	SOCKET, CONNECTOR 9P			
CNJ1	*1-568-276-11	SOCKET, CONNECTOR 10P			
CNJ2	*1-568-273-11	SOCKET, CONNECTOR 7P			
CNJ3	*1-568-275-11	SOCKET, CONNECTOR 9P			
CNJ4	1-568-269-11	(JX295)...SOCKET, CONNECTOR 3P			
CP1	⚠1-551-188-XX	(JX390:E)...CORD, POWER			
CP1	⚠1-557-577-11	(JX390).....CORD, POWER			
CP701	1-233-148-11	COMPOSITION CIRCUIT BLOCK			
D21	8-719-000-26	(JX390)...DIODE US1060M			
D22	8-719-000-26	(JX390)...DIODE US1060M			
D23	8-719-000-26	(JX390)...DIODE US1060M			
D24	8-719-000-26	(JX390)...DIODE US1060M			
D501	8-719-200-77	DIODE 10E2N			
D502	8-719-200-77	DIODE 10E2N			
D503	8-719-000-26	DIODE US1060M			
D504	8-719-000-26	DIODE US1060M			
D505	8-719-109-89	DIODE RD5.6ES-B2			
D506	8-719-904-93	DIODE EQA02-30B			
D507	8-719-000-26	DIODE US1060M			
D601	8-719-000-26	(JX295)....DIODE US1060M			
D602	8-719-000-51	(JX295)....DIODE UZL-6L2			
D603	8-719-109-89	(JX295)....DIODE RD5.6ES-B2			
D701	8-719-000-26	DIODE US1060M			
D702	8-719-000-26	DIODE US1060M			
D703	8-719-000-26	DIODE US1060M			
D707	8-719-000-26	(JX390/JX295:E)...DIODE US1060M			
D708	8-719-000-26	DIODE US1060M			
D709	8-719-000-26	DIODE US1060M			
D710	8-719-000-26	DIODE US1060M			
D711	8-719-000-26	DIODE US1060M			
D712	8-719-000-26	DIODE US1060M			

Ref.No.	Part No.	Description			
D713	8-719-000-26	DIODE US1060M			
D714	8-719-000-26	DIODE US1060M			
D715	8-719-000-26	DIODE US1060M			
D716	8-719-000-26	DIODE US1060M			
D717	8-719-000-26	DIODE US1060M			
D718	8-719-000-26	DIODE US1060M			
FE1	1-463-862-21	FRONT END, FM			
FE61	1-236-461-11	ENCAPSULATED COMPONENT			
FL701	1-519-512-11	INDICATOR TUBE, FLUORESCENT			
IC21	8-759-821-45	IC LA1851N			
IC81	8-759-820-91	IC LC7218			
IC501	8-759-820-09	IC LA5667			
IC701	8-759-234-26	IC TMP47C670N-1282			
L1	1-410-521-11	MICRO INDUCTOR			
L21	1-410-171-11	MICRO INDUCTOR			
L601	1-410-521-11	(JX295)...INDUCTOR 100UH			
L701	1-410-521-11	INDUCTOR 100UH			
LPF21	1-235-164-00	FILTER, LOW PASS			
LPF22	1-235-164-00	FILTER, LOW PASS			
PJ1	1-565-352-21	(JX390)...JACK, PIN 2P			
PT501⚠	1-449-526-11	(JX390:E)....TRANSFORMER, POWER			
PT501⚠	1-449-527-11	(JX390:US)...TRANSFORMER, POWER			
Q1	8-729-266-93	TRANSISTOR 2SC2669			
Q2	8-729-266-93	TRANSISTOR 2SC2669			
Q21	8-729-119-78	TRANSISTOR 2SC2785			
Q22	8-729-119-78	TRANSISTOR 2SC2785			
Q26	8-729-900-80	TRANSISTOR DTC114ES			
Q27	8-729-119-78	(JX390)...TRANSISTOR 2SC2785			
Q28	8-729-119-78	(JX390)...TRANSISTOR 2SC2785			
Q81	8-729-806-10	TRANSISTOR 2SA1348			
Q82	8-729-900-80	TRANSISTOR DTC114ES			
Q83	8-729-202-67	TRANSISTOR 2SK246GR3			
Q84	8-729-201-84	TRANSISTOR 2SC3112-13			
Q601	8-729-115-77	(JX295)...TRANSISTOR BA1L4M			
Q602	8-729-115-77	(JX295)...TRANSISTOR BA1L4M			
R1	⚠1-249-401-11	RES, CARBON (SMALL)	47	5%	1/4W F
R2	1-249-329-11	CARBON MELF	330	5%	1/8W
R3	1-249-329-11	CARBON MELF	330	5%	1/8W
R4	1-249-329-11	CARBON MELF	330	5%	1/8W
R5	1-249-329-11	CARBON MELF	330	5%	1/8W
R6	1-249-350-11	CARBON MELF	18K	5%	1/8W
R7	1-249-329-11	CARBON MELF	330	5%	1/8W
R8	1-249-332-11	CARBON MELF	560	5%	1/8W
R9	1-249-352-11	CARBON MELF	27K	5%	1/8W
R21	⚠1-249-404-00	RES, CARBON (SMALL)	82	5%	1/4W F
R22	1-249-428-11	(JX390:US/JX295:US,Canadian) ...RES, CARBON (SMALL)	8.2K	5%	1/4W
R22	1-249-433-00	(JX390/JX295:E) ...RES, CARBON (SMALL)	22K	5%	1/4W
R23	1-249-335-11	CARBON MELF	1K	5%	1/8W
R24	1-249-353-11	CARBON MELF	33K	5%	1/8W
R25	1-249-428-11	RES, CARBON (SMALL)	8.2K	5%	1/4W
R27	1-249-350-11	CARBON MELF	18K	5%	1/8W
R29	1-249-347-11	CARBON MELF	10K	5%	1/8W
R31	1-249-331-11	CARBON MELF	470	5%	1/8W
R32	1-249-347-11	CARBON MELF	10K	5%	1/8W
R33	1-249-347-11	CARBON MELF	10K	5%	1/8W

Note:
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Note:
Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No.	Part No.	Description
R34	1-249-425-11	(JX390)...RES,CARBON(SMALL) 4.7K
R34	1-249-437-11	(JX295)...RES,CARBON(SMALL) 47K 5% 1/4W
R35	1-249-355-11	CARBON MELF 47K 5% 1/8W
R37	1-249-359-11	CARBON MELF 100K 5% 1/8W
R38	1-249-363-11	CARBON MELF 220K 5% 1/8W
R39	1-249-339-11	CARBON MELF 2.2K 5% 1/8W
R40	1-249-338-11	CARBON MELF 1.8K 5% 1/8W
R41	1-249-344-11	CARBON MELF 5.6K 5% 1/8W
R42	1-249-359-11	CARBON MELF 100K 5% 1/8W
R43	1-249-363-11	CARBON MELF 220K 5% 1/8W
R44	1-249-339-11	CARBON MELF 2.2K 5% 1/8W
R45	1-249-338-11	CARBON MELF 1.8K 5% 1/8W
R46	1-249-344-11	CARBON MELF 5.6K 5% 1/8W
R47	⚠1-249-409-11	RES, CARBON (SMALL) 220 5% 1/4W F
R48	1-249-359-11	(JX390)...CARBON MELF 100K 5% 1/8W
R49	1-249-359-11	(JX390)...CARBON MELF 100K 5% 1/8W
R61	1-249-359-11	CARBON MELF 100K 5% 1/8W
R62	1-249-355-11	CARBON MELF 47K 5% 1/8W
R63	1-249-315-11	CARBON MELF 22 5% 1/8W
R81	1-249-335-11	CARBON MELF 1K 5% 1/8W
R82	1-249-335-11	CARBON MELF 1K 5% 1/8W
R83	1-249-335-11	CARBON MELF 1K 5% 1/8W
R84	1-249-335-11	CARBON MELF 1K 5% 1/8W
R85	1-249-347-11	CARBON MELF 10K 5% 1/8W
R86	1-249-335-11	CARBON MELF 1K 5% 1/8W
R87	1-249-347-11	CARBON MELF 10K 5% 1/8W
R88	1-249-343-11	CARBON MELF 4.7K 5% 1/8W
R89	1-249-335-11	CARBON MELF 1K 5% 1/8W
R90	1-249-347-11	CARBON MELF 10K 5% 1/8W
R91	1-249-335-11	CARBON MELF 1K 5% 1/8W
R92	⚠1-249-401-11	RES, CARBON (SMALL) 47 5% 1/4W F
R101	1-249-341-11	CARBON MELF 3.3K 5% 1/8W
R102	1-249-332-11	CARBON MELF 560 5% 1/8W
R103	1-249-335-11	CARBON MELF 1K 5% 1/8W
R104	1-249-328-11	CARBON MELF 270 5% 1/8W
R105	1-249-343-11	CARBON MELF 4.7K 5% 1/8W
R106	1-249-339-11	CARBON MELF 2.2K 5% 1/8W
R107	1-249-343-11	CARBON MELF 4.7K 5% 1/8W
R108	1-249-323-11	CARBON MELF 100 5% 1/8W
R109	1-249-343-11	CARBON MELF 4.7K 5% 1/8W
R110	⚠1-249-405-11	RES, CARBON (SMALL) 100 5% 1/4W F
R501	1-202-725-00	SOLID 3.3M 10% 1/2W
R502	1-249-437-11	CARBON 47K 5% 1/4W
R503	⚠1-247-752-11	CARBON 1K 5% 1/2W F
R504	1-249-393-11	CARBON 10 5% 1/4W
R505	1-249-441-11	CARBON 100K 5% 1/4W
R601	1-249-393-11	(JX295)...CARBON 10 5% 1/4W
R602	⚠1-247-741-11	(JX295)...CARBON 150 5% 1/2W
R603	1-249-429-11	(JX295)...CARBON 10K 5% 1/4W
R604	1-249-429-11	(JX295)...CARBON 10K 5% 1/4W
R605	1-249-435-11	(JX295)...CARBON 33K 5% 1/4W
R606	1-249-438-11	(JX295)...CARBON 56K 5% 1/4W
R607	1-249-441-11	(JX295)...CARBON 100K 5% 1/4W

Ref.No.	Part No.	Description
R690	⚠1-212-942-00	(JX295)...FUSIBLE 2.2 5% 1/2W
R701	1-249-405-11	CARBON 100 5% 1/4W
R702	1-249-441-11	CARBON 100K 5% 1/4W
R703	1-249-441-11	CARBON 100K 5% 1/4W
R704	1-249-441-11	CARBON 100K 5% 1/4W
R709	1-249-417-11	CARBON 1K 5% 1/4W
R710	1-249-411-11	CARBON 330 5% 1/4W
R711	1-249-411-11	CARBON 330 5% 1/4W
R712	1-249-429-11	CARBON 10K 5% 1/4W
R713	1-249-429-11	CARBON 10K 5% 1/4W
R714	1-249-429-11	CARBON 10K 5% 1/4W
R715	1-249-429-11	CARBON 10K 5% 1/4W
R716	1-249-429-11	CARBON 10K 5% 1/4W
R717	1-249-429-11	CARBON 10K 5% 1/4W
R718	1-249-429-11	CARBON 10K 5% 1/4W
R719	1-249-429-11	CARBON 10K 5% 1/4W
R720	1-249-441-11	CARBON 100K 5% 1/4W
R721	1-249-441-11	CARBON 100K 5% 1/4W
RV21	1-238-013-11	RES, ADJ, CARBON 2.2K
RV22	1-238-017-11	RES, ADJ, CARBON 22K
RV24	1-238-017-11	RES, ADJ, CARBON 22K
S1	⚠1-554-920-11	(JX390)..SWITCH, PUSH (AC POWER)(1 KEY)
S701	1-554-303-21	SWITCH, KEY BOARD (1)
S702	1-554-303-21	SWITCH, KEY BOARD (2)
S703	1-554-303-21	SWITCH, KEY BOARD (3)
S704	1-554-303-21	SWITCH, KEY BOARD (4)
S705	1-554-303-21	SWITCH, KEY BOARD (5)
S706	1-554-303-21	SWITCH, KEY BOARD (6)
S707	1-554-303-21	SWITCH, KEY BOARD (7)
S708	1-554-303-21	SWITCH, KEY BOARD (8)
S709	1-554-303-21	SWITCH, KEY BOARD (9)
S710	1-554-303-21	SWITCH, KEY BOARD (0)
S711	1-554-303-21	SWITCH, KEY BOARD (AUTO TUNING)
S712	1-554-303-21	SWITCH, KEY BOARD (MEMORY SCAN)
S713	1-554-303-21	SWITCH, KEY BOARD (MEMORY)
S714	1-554-303-21	SWITCH, KEY BOARD (SHIFT)
S715	1-554-303-21	SWITCH, KEY BOARD (BAND FM/AM)
S716	1-554-088-00	SWITCH, KEY BOARD (TUNING +)
S717	1-554-088-00	SWITCH, KEY BOARD (TUNING -)
T21	1-404-807-11	TRANSFORMER, DISCRIMINATOR
TB501	*1-535-141-00	(JX390:US)..BASE POST 22MM(10MM PITCH)4P
TB501	*1-535-142-21	(JX390:E)...BASE POST 22MM(10MM PITCH)5P
TM1	1-536-708-00	TERMINAL BOARD, PUSH 4P
TP1	*1-560-060-00	PIN, CONNECTOR 2P
VS1	⚠1-570-046-21	(JX390:E)...SWITCH, VOLTAGE CHANGE
XT81	1-577-126-11	VIBRATOR, CRYSTAL

Note:
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Note:
Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

ACCESSORY & PACKING MATERIAL

1-501-374-11	(JX390)...ANTENNA, LOOP
1-558-232-11	(JX390)...CORD (WITH CONNECTOR)(SIRCS)4P
1-558-543-11	(JX390)...CORD, CONNECTION
3-750-169-11	(JX390:E)....MANUAL, INSTRUCTION
3-750-169-21	(JX390:US)...MANUAL, INSTRUCTION
*3-704-339-01	(JX390)...SHEET (STANDARD), PROTECTION
*4-917-057-01	(JX390)...CUSHION
*4-917-066-01	(JX390)...INDIVIDUAL CARTON

9-953-698-11

Sony Corporation
Audio Group

English
89C0537-1
Printed in Japan
© 1989. 3

Published by A/V Engineering Service Dept.

ST-JX295/JX390

SONY

SERVICE MANUAL

US Model
E Model
ST-JX295/JX390

Canadian Model
ST-JX295

SUPPLEMENT-1

File this supplement with the Service Manual.

Subject : Australian model has been added.

ST-JX390 Australian model has been added for E model.
This supplement only contains the difference between the models.
Therefore, refer to the service manual for the other information.

ST-JX390 E model				ST-JX390 Australian model	
Page	No.	Part No.	Description	Part No.	Description
	12	*3-703-571-12	BUSHING (4516), CORD	*3-703-244-00	BUSHING (2104), CORD
21	911	⚠1-526-565-12	AC PLUG ADAPTOR	⚠1-506-401-00	ADAPTOR, CONVERSION
	CP1	⚠1-551-188-XX	CORD, POWER	⚠1-555-795-00	CORD, POWER,EURO PLUG

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

9-953-698-81

Sony Corporation
Audio Group

English
89K0511-1
Printed in Japan
© 1989.11
Published by Customer Relations and Service Group

ST-JX295/JX390

SONY
SERVICE MANUAL

US Model
E Model
ST-JX295/JX390
Canadian Model
ST-JX295

SUPPLEMENT-2

Subject:
TUNER BOARD MODIFICATION

The tuner board has been modified.
File this supplement with the service manual.

- **DIFFERENCE BETWEEN NEW TYPE AND FORMER TYPE**

FORMER

[TUNER BOARD] – **Component Side** –

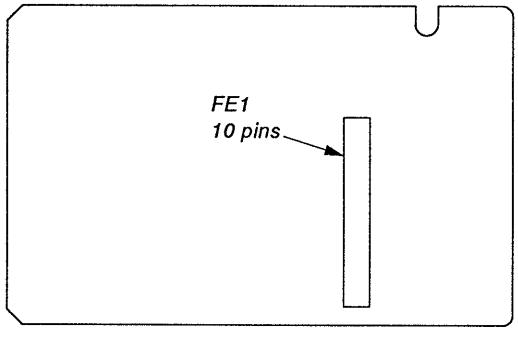

NEW

[TUNER BOARD] – **Component Side** –

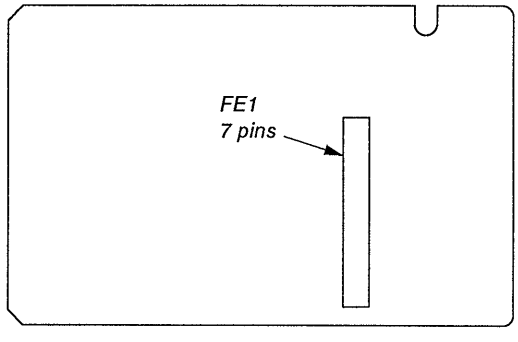

Note: The mounted tuner board can be replaced with the new type as a whole block.

Note on Printed Wiring Board:

- ○——— : parts extracted from the component side.
- ⊡← : indicates side identified with part number.

[Note on Inserting the Cord to the Connector on Tuner Board]

- Insert the cord to the connector fitting Pin ① of the cord in accordance with the white mark on the board at the connector as shown in the figure.

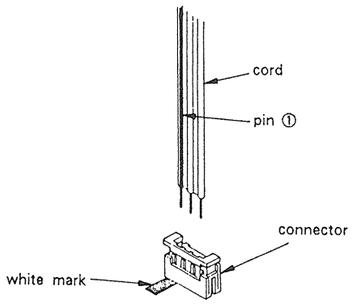

Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF: μμF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and ¼ W or less unless otherwise specified.
- △ : internal component.
- ⚠ : nonflammable resistor.

Note:	Note:
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- B+ : B + Line.
- B− : B − Line.
- ▭ : adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
  no mark : FM
  ( ) : AM
- Voltages are taken with a VOM (10 MΩ/V).
  Voltage variations may be noted due to normal production tolerances.
- Wavefroms are taken with a oscilloscope.
  Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to wavefroms.
- Signal path.
  ⇨ : FM

[PRINTED WIRING BOARD]

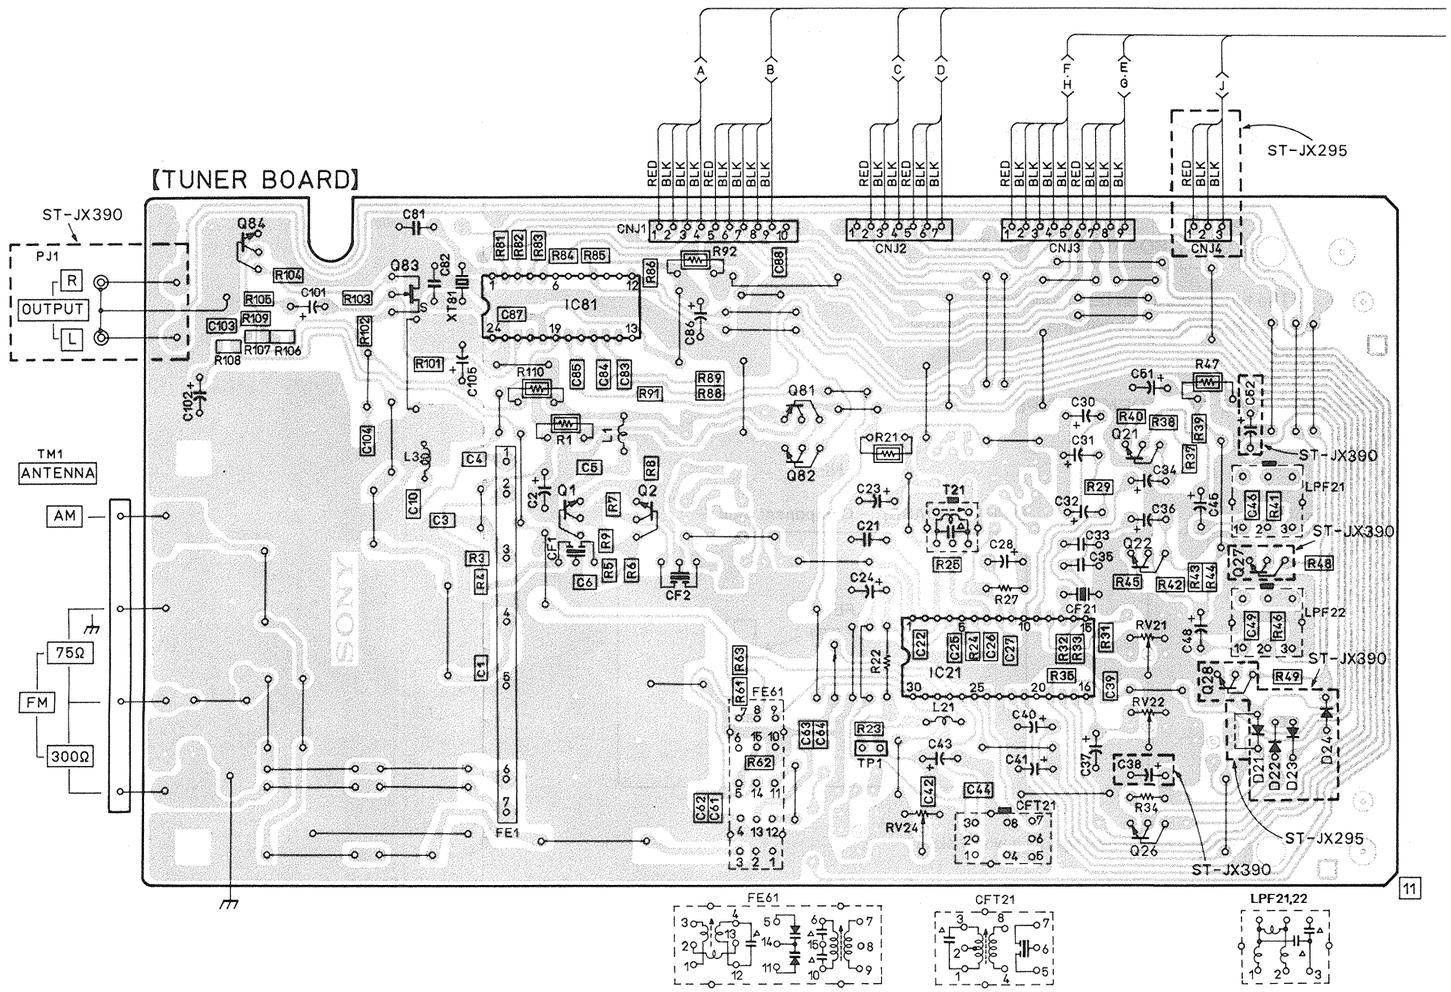

[SCHEMATIC DIAGRAM]

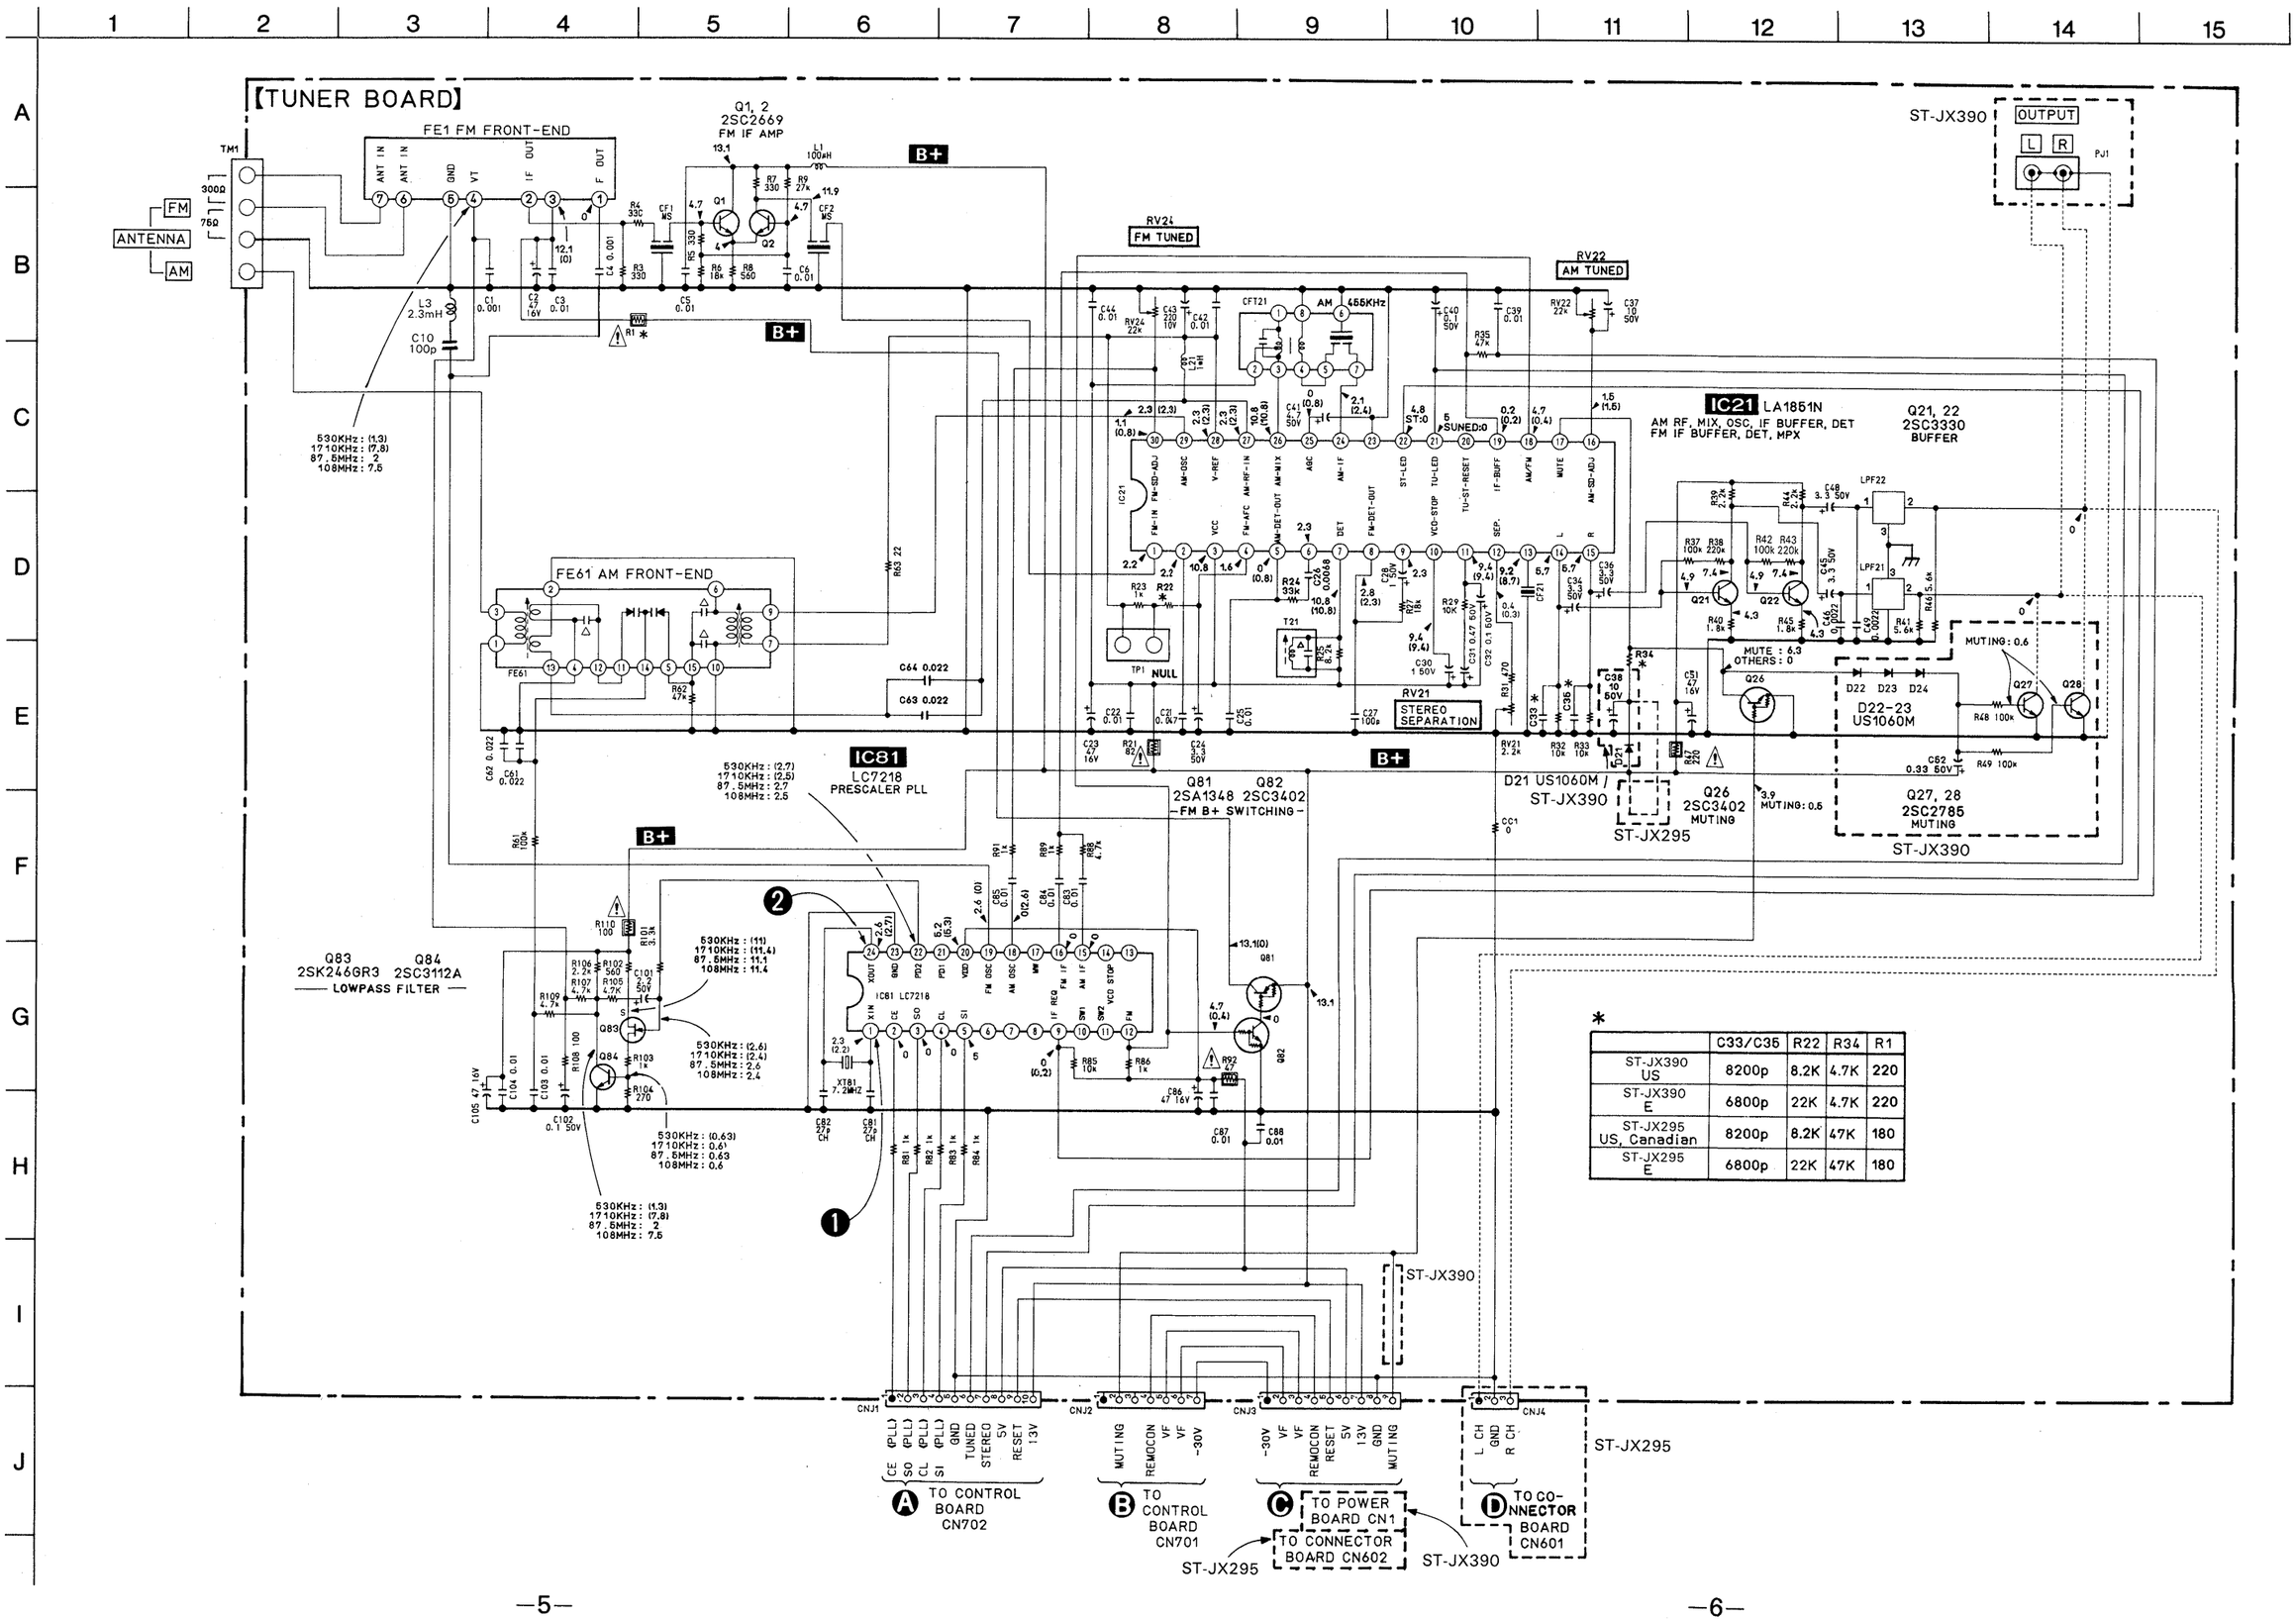

*

	C33/C35	R22	R34	R1
ST-JX390 US	8200p	8.2K	4.7K	220
ST-JX390 E	6800p	22K	4.7K	220
ST-JX295 US, Canadian	8200p	8.2K	47K	180
ST-JX295 E	6800p	22K	47K	180

[ELECTRICAL PARTS LIST]

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:
MF: μF, PF: μμF.

RESISTORS
- All resistors are in ohms.
- F: nonflammable

COILS
- MMH: mH, UH: μH

SEMICONDUCTORS
In each case, U: μ, for example:
UA...: μA..., UPA...: μPA..., UPC...: μPC, UPD...: μPD...

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No.	Part No.	Description		
904	* A-4303-238-A	(JX295:US Canadian)...MOUNTED PCB TUNER		
	* A-4303-239-A	(JX295:E).....MOUNTED PCB TUNER		
	* A-4303-236-A	(JX390:US).....MOUNTED PCB TUNER		
	* A-4303-237-A	(JX390:E).....MOUNTED PCB TUNER		
C1	1-162-294-31	CERAMIC CHIP 0.001MF	20%	25V
C2	1-124-477-11	CAP, ELECT 47MF	20%	16V
C3	1-163-059-00	CERAMIC MELF 0.01MF	20%	16V
C4	1-162-294-31	CERAMIC CHIP 0.001MF	20%	25V
C5	1-163-059-00	CERAMIC MELF 0.01MF	20%	16V
C6	1-163-059-00	CERAMIC MELF 0.01MF	20%	16V
C10	1-162-516-11	CERAMIC CHIP 100PF	10%	50V
C9	1-163-059-00	CERAMIC MELF 0.01MF	20%	16V
C21	1-161-021-11	CAP, CERAMIC 0.047MF	10%	25V
C22	1-163-059-00	CERAMIC MELF 0.01MF	20%	16V
C23	1-124-477-11	CAP, ELECT 47MF	20%	16V
C24	1-123-382-00	CAP, ELECT 3.3MF	20%	50V
C25	1-163-059-00	CERAMIC MELF 0.01MF	20%	16V
C26	1-162-527-11	CERAMIC CHIP 0.0068MF	20%	12V
C27	1-162-516-11	CERAMIC CHIP 100PF	10%	50V
C28	1-124-499-11	CAP, ELECT 1.0MF	20%	50V
C30	1-124-499-11	CAP, ELECT 1.0MF	20%	50V
C31	1-124-902-00	CAP, ELECT 0.47MF	20%	50V
C32	1-124-463-00	CAP, ELECT 0.1MF	20%	50V
C33	1-130-481-91	(JX390/JX295:E)...CAP,PE TEREPHTHALATE 00068MF	5%	50V
C33	1-130-482-00	(JX390:US/JX295:US,Canadian)... CAP, PE TEREPHTHALATE 0.0082MF	5%	50V
C34	1-123-382-00	CAP, ELECT 3.3MF	20%	50V
C35	1-130-481-91	(JX390/JX295:E)...CAP,PE TEREPHTHALATE 00068MF	5%	50V
C35	1-130-482-00	(JX390:US/JX295:US,Canadian)... CAP, PE TEREPHTHALATE 0.0082MF	5%	50V
C36	1-123-382-00	CAP, ELECT 3.3MF	20%	50V
C37	1-123-875-11	CAP, ELECT 10MF	20%	50V
C38	1-123-875-11	(JX390)...CAP,ELECT 10MF	20%	50V
C39	1-163-059-00	CERAMIC MELF 0.01MF	20%	16V
C40	1-124-463-00	CAP, ELECT 0.1MF	20%	50V
C41	1-124-927-11	CAP, ELECT 4.7MF	20%	50V
C42	1-163-059-00	CERAMIC MELF 0.01MF	20%	16V
C43	1-126-176-11	CAP, ELECT 220MF	20%	10V
C44	1-163-059-00	CERAMIC MELF 0.01MF	20%	16V
C45	1-123-382-00	CAP, ELECT 3.3MF	20%	50V
C46	1-162-524-11	CERAMIC CHIP 0.0022MF	20%	25V
C48	1-123-382-00	CAP, ELECT 3.3MF	20%	50V
C49	1-162-524-11	CERAMIC CHIP 0.0022MF	20%	25V
C51	1-124-477-11	CAP, ELECT 47MF	20%	16V
C52	1-123-609-11	(JX390)...CAP,ELECT 0.33MF	20%	50V
C61	1-163-063-00	CERAMIC MELF 0.022MF		25V
C62	1-163-063-00	CERAMIC MELF 0.022MF		25V
C63	1-163-063-00	CERAMIC MELF 0.022MF		25V
C64	1-163-063-00	CERAMIC MELF 0.022MF		25V
C81	1-102-961-00	CAP, CERAMIC 27PF	5%	50V
C82	1-102-961-00	CAP, CERAMIC 27PF	5%	50V
C83	1-163-059-00	CERAMIC MELF 0.01MF	20%	16V
C84	1-163-059-00	CERAMIC MELF 0.01MF	20%	16V
C85	1-163-059-00	CERAMIC MELF 0.01MF	20%	16V
C86	1-124-477-11	CAP, ELECT 47MF	20%	16V
C87	1-163-059-00	CERAMIC MELF 0.01MF	20%	16V
C88	1-163-059-00	CERAMIC MELF 0.01MF	20%	16V
C101	1-124-925-11	CAP, ELECT 2.2MF	20%	50V
C102	1-124-463-00	CAP, ELECT 0.1MF	20%	50V
C105	1-124-477-11	CAP, ELECT 47MF	20%	16V
C103	1-163-059-00	CERAMIC MELF 0.01MF	20%	16V
C104	1-163-059-00	CERAMIC MELF 0.01MF	20%	16V
CC11	1-249-366-11	CARBON MELF 0	5%	1/5W
CF1	1-567-389-11	FILTER, CERAMIC		
CF2	1-567-389-11	FILTER, CERAMIC		
CF21	1-577-075-11	OSCILLATOR, CERAMIC		
CF701	1-577-359-21	VIBRATOR, CERAMIC		
CFT21	1-404-853-11	TRANSFORMER,IF (CERAMIC FILTER)		
CNJ1	*1-568-276-11	SOCKET, CONNECTOR 10P		
CNJ2	*1-568-273-11	SOCKET, CONNECTOR 7P		
CNJ3	*1-568-275-11	SOCKET, CONNECTOR 9P		
CNJ4	1-568-269-11	(JX295)...SOCKET, CONNECTOR 3P		
D21	8-719-000-26	(JX390)...DIODE US1060M		
D22	8-719-000-26	(JX390)...DIODE US1060M		
D23	8-719-000-26	(JX390)...DIODE US1060M		
D24	8-719-000-26	(JX390)...DIODE US1060M		
FE1	1-463-962-21	FRONT END, FM		
FE61	1-236-461-11	ENCAPSULATED COMPONENT		
IC21	8-759-821-45	IC LA1851N		
IC81	8-759-820-91	IC LC7218		
L1	1-410-521-11	MICRO INDUCTOR 100UH		
L21	1-410-171-11	MICRO INDUCTOR 1MMH		
LPF21	1-235-164-00	FILTER, LOW PASS		
LPF22	1-235-164-00	FILTER, LOW PASS		
PJ1	1-565-352-21	(JX390)...JACK, PIN 2P		

Ref.No.	Part No.	Description
Q1	8-729-266-93	TRANSISTOR 2SC2669
Q2	8-729-266-93	TRANSISTOR 2SC2669
Q21	8-729-119-78	TRANSISTOR 2SC2785-HFE
Q22	8-729-119-78	TRANSISTOR 2SC2785-HFE
Q26	8-729-900-80	TRANSISTOR DTC114ES
Q27	8-729-620-05	(JX390)...TRANSISTOR 2SC2603-EF
Q28	8-729-620-05	(JX390)...TRANSISTOR 2SC2603-EF
Q81	8-729-806-10	TRANSISTOR 2SA1348
Q82	8-729-900-80	TRANSISTOR DTC114ES
Q83	8-729-202-67	TRANSISTOR 2SK246GR3
Q84	8-729-201-84	TRANSISTOR 2SC3112-13
R1	⚠ 1-249-409-11	RES, CARBON (SMALL) 220 5% 1/4W F
R3	1-249-329-11	CARBON MELF 330 5% 1/8W
R4	1-249-329-11	CARBON MELF 330 5% 1/8W
R5	1-249-329-11	CARBON MELF 330 5% 1/8W
R6	1-249-350-11	CARBON MELF 18K 5% 1/8W
R7	1-249-329-11	CARBON MELF 330 5% 1/8W
R8	1-249-332-11	CARBON MELF 560 5% 1/8W
R9	1-249-352-11	CARBON MELF 27K 5% 1/8W
R21	⚠ 1-249-404-00	RES, CARBON (SMALL) 82 5% 1/4W F
R22	1-249-428-11	(JX390:US/JX295:US,Canadian) ...RES, CARBON (SMALL) 8.2K 5% 1/4W
R22	1-249-433-00	(JX390/JX295:E) ...RES, CARBON (SMALL) 22K 5% 1/4W
R23	1-249-335-11	CARBON MELF 1K 5% 1/8W
R24	1-249-353-11	CARBON MELF 33K 5% 1/8W
R25	1-249-346-11	CARBON MELF 8.2K 5% 1/8W
R27	1-249-350-11	CARBON MELF 18K 5% 1/8W
R29	1-249-347-11	CARBON MELF 10K 5% 1/8W
R31	1-249-331-11	CARBON MELF 470 5% 1/8W
R32	1-249-347-11	CARBON MELF 10K 5% 1/8W
R33	1-249-347-11	CARBON MELF 10K 5% 1/8W
R34	1-249-425-11	(JX390)...RES,CARBON(SMALL) 4.7K
R34	1-249-437-11	(JX295)...RES,CARBON(SMALL) 47K 5% 1/4W
R35	1-249-355-11	CARBON MELF 47K 5% 1/8W
R37	1-249-359-11	CARBON MELF 100K 5% 1/8W
R38	1-249-363-11	CARBON MELF 220K 5% 1/8W
R39	1-249-339-11	CARBON MELF 2.2K 5% 1/8W
R40	1-249-338-11	CARBON MELF 1.8K 5% 1/8W
R41	1-249-344-11	CARBON MELF 5.6K 5% 1/8W
R42	1-249-359-11	CARBON MELF 100K 5% 1/8W
R43	1-249-363-11	CARBON MELF 220K 5% 1/8W
R44	1-249-339-11	CARBON MELF 2.2K 5% 1/8W
R45	1-249-338-11	CARBON MELF 1.8K 5% 1/8W
R46	1-249-344-11	CARBON MELF 5.6K 5% 1/8W
R47	⚠ 1-249-409-11	RES, CARBON (SMALL) 220 5% 1/4W F
R48	1-249-359-11	(JX390)...CARBON MELF 100K 5% 1/8W
R49	1-249-359-11	(JX390)...CARBON MELF 100K 5% 1/8W
R61	1-249-359-11	CARBON MELF 100K 5% 1/8W
R62	1-249-355-11	CARBON MELF 47K 5% 1/8W
R63	1-249-315-11	CARBON MELF 22 5% 1/8W
R81	1-249-335-11	CARBON MELF 1K 5% 1/8W
R82	1-249-335-11	CARBON MELF 1K 5% 1/8W
R83	1-249-335-11	CARBON MELF 1K 5% 1/8W
R84	1-249-335-11	CARBON MELF 1K 5% 1/8W
R85	1-249-347-11	CARBON MELF 10K 5% 1/8W
R86	1-249-335-11	CARBON MELF 1K 5% 1/8W
R87	1-249-347-11	CARBON MELF 10K 5% 1/8W
R88	1-249-343-11	CARBON MELF 4.7K 5% 1/8W
R89	1-249-335-11	CARBON MELF 1K 5% 1/8W
R90	1-249-347-11	CARBON MELF 10K 5% 1/8W
R91	1-249-335-11	CARBON MELF 1K 5% 1/8W
R92	⚠ 1-249-401-11	RES, CARBON (SMALL) 47 5% 1/4W F
R101	1-249-341-11	CARBON MELF 3.3K 5% 1/8W
R102	1-249-332-11	CARBON MELF 560 5% 1/8W
R103	1-249-335-11	CARBON MELF 1K 5% 1/8W
R104	1-249-328-11	CARBON MELF 270 5% 1/8W
R105	1-249-343-11	CARBON MELF 4.7K 5% 1/8W
R106	1-249-339-11	CARBON MELF 2.2K 5% 1/8W
R107	1-249-343-11	CARBON MELF 4.7K 5% 1/8W
R108	1-249-323-11	CARBON MELF 100 5% 1/8W
R109	1-249-343-11	CARBON MELF 4.7K 5% 1/8W
R110	⚠ 1-249-405-11	RES, CARBON (SMALL) 100 5% 1/4W F
RV21	1-238-013-11	RES, ADJ, CARBON 2.2K
RV22	1-238-017-11	RES, ADJ, CARBON 22K
RV24	1-238-017-11	RES, ADJ, CARBON 22K
T21	1-404-807-11	TRANSFORMER, DISCRIMINATOR
TM1	1-536-708-00	TERMINAL BOARD, PUSH 4P
TP1	*1-560-060-00	PIN, CONNECTOR 2P
XT81	1-577-126-11	VIBRATOR, CRYSTAL

Note:
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Note:
Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

9-953-698-82

Sony Corporation
Audio Group

English
91C0536-1
Printed in Japan
© 1991.3

Published by Customer Relations and Service Group